

Retail Customer Information Display (Dual Display) User's Guide



BD20-1431-B
Issue H

Table of Contents

Chapter 1: System Overview

Introduction	1-1
Video Chipsets.....	1-3
S3 (Diamond Multimedia) Video Chipset	1-3
Chips and Technologies (C&T, Chips, Asilant, Intellgraphics) Video Chipsets	1-3
Silicon Motion Incorporated (SMI) Video Chipset	1-4
Intel Video Chipset.....	1-4
Via Video Chipset.....	1-5
ATI Video Chipset.....	1-5
Linux Chipset Issues	1-5
Hardware Requirements.....	1-6
Display Modes	1-6
LCD Controller Video Memory.....	1-7
PCI LCD Cards	1-8
5953-K152 PCI LCD Card	1-8
5952-K052 PCI LCD Card	1-9
Setting the Panel Select Switch (SW1)	1-9
7456-K350 PCI VGA Card	1-10
Display Adapter Configurations	1-11
Supported Platforms.....	1-12
7401/7454 TX Supported Configurations by Operating System	1-12
7401 Summa Supported Configurations by Operating System	1-13
7448 Supported Configurations by Operating System	1-13
7451 Supported Configurations by Operating System	1-13

7452 Supported Configurations by Operating System	1-14
7453 Supported Configurations by Operating System	1-15
7454 Summa POS Supported Configurations by Operating System	1-16
7455 POS Supported Configurations by Operating System...	1-17
7456 Supported Configurations by Operating System	1-18
7458 Supported Configurations by Operating System	1-19
7460 Supported Configurations by Operating System	1-20

Chapter 2: Drivers for DOS, Win3.1, and Win95

Overview of Functionality	2-2
Linear vs. Non-Linear Drivers (for ISA LCD only)	2-3
Installation	2-4
Driver Files.....	2-4
Changes to <code>system.ini</code>	2-6
[BOOT] and [386Enh] sections.....	2-6
[DISPLAY] section.....	2-7
Using Nonlinear Drivers	2-9
Using the Driver.....	2-10
Before Loading Windows.....	2-10
Loading <code>S3.com</code>	2-10
DOS	2-10
Windows 3.1 and Windows95 OSR 1.....	2-11
After Loading Windows.....	2-11
Running the (S3.com) DOS TSR.....	2-12
Software Overview.....	2-12
DOS Application Programming Interfaces.....	2-13
INT 10H API.....	2-13
Firmware Interfaces	2-16
Initialization.....	2-16
Power Control Considerations - APM	2-17

Running the (SMI_CT.COM) DOS TSR	2-18
File descriptions.....	2-18
Installation.....	2-18
Interfacing with the Multimon TSR.....	2-19
Running the (VIA_CT.COM) DOS TSR.....	2-20
File descriptions.....	2-20
Installation.....	2-20
Interfacing with the Multimon TSR.....	2-22
Troubleshooting for DOS, Win3.1, and Win95	2-23
Troubleshooting Chart.....	2-24

Chapter 3: Drivers for Windows 95 (OSR2)

Overview of Functionality	3-1
Installation	3-2
Files.....	3-4
Changes to system.ini	3-5
SMI Drivers for Windows 95.....	3-5

Chapter 4: Drivers for Windows 98

Configurations.....	4-1
Installation	4-1
SMI Drivers for Windows 98.....	4-2

Chapter 5: Drivers for Windows NT

Overview of Functionality	5-1
Windows NT 4.0 Driver Installation Procedure.....	5-5
Troubleshooting for Windows NT	5-6
Troubleshooting Chart.....	5-6
SMI Drivers for Windows NT	5-6

Chapter 6: Drivers for Windows 2000

Introduction	6-1
Configurations.....	6-1
Windows 2000 Multi Monitor Concepts.....	6-1
7452/53-3000 Terminals	6-3
7452/53-3500 Terminals	6-3
7452/53-4000 Terminals	6-3
Software Installation.....	6-5
7452/53-3000 Terminals	6-5
7452/53-3500 Terminals	6-7
7452/53-4000 Terminals	6-12
7456/58-1XXX Terminals	6-15
Configuring Windows 2000 for Dual Display.....	6-22
NCR 9-Inch Monochrome CRT	6-23
Removing the Video Drivers	6-25

Chapter 7: Drivers for Windows CE**Chapter 8: Drivers for Linux**

Installation	8-1
Linux Commands:	8-5
Suggested Reading:	8-5

Appendix A: Glossary

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*