

---

# **PROGRAMMING INSTRUCTIONS**

**ECR 360T**

<b>Contents:</b>	<b>Page</b>
<b>1. Basic Features, Training</b>	3
<b>2. System Reset, Machine Initialisation</b>	6
<b>3. Keyboard Description, Default Keyboard Layout</b>	7
<b>4. S Mode, Service Mode</b>	9
4.1 Machine Establishment Dump (Initialisation)	9
4.2 System Building Dump (Allocation)	10
4.3 Keyboard Program Mode	11
4.4 Printout Establishment in S Mode	13
<b>5. PRG Mode, Program Mode Operation</b>	14
5.1 Program Departments	15
5.2 Program Department Group Name	16
5.3 Program PLU	17
5.4 Program Link PLU	19
5.5 Program PLU Group Name	20
5.6 Program Clerk	20
5.7 Program Tender Media (Payment Method)	22
5.8 Program Absolute Add On, Discount +, -	23
5.9 Program Percentage Add On, Discount +%, -%	23
5.10 Program Manager Passcode	24
5.11 Program Machine Number	24
5.12 Program P-Register (Set Function Attributes, Machine Option)	25
5.13 Program Date	28
5.14 Program Time	28
5.15 Program Foreign Currencies	29
5.16 Program P-Register, X and Z Reports (Print Selection, Reports)	30
5.18 Program Printing Line Height	31
5.20 Program PLU Allocation to "PLU Clerk Report"	32
5.22 Program Machine COM Port	33
5.23 Program Tax	34
5.24 Program Logo Message	34
5.25 Program AD Message	35
5.32 Check and Print Program Dump Report in PRG Mode	36
<b>7. Stock PLU, Stock Counter Adjustment, Link PLU Stock</b>	38
<b>8. X-Reports, Z-Reports Overview</b>	39
<b>9. Character Table, Key Assignment for Programming</b>	41
<b>10. Error Messages (Error Symbols)</b>	42
<b>11. Plug-in Peripherals, Instructions for Manager/Helper, Modem and Scanner</b>	45

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)