

# Service Manual

Front Counter Register  
**JS-170FR-\*\***

**Panasonic®**

© 2001 Matsusita Communication Industrial Co., Ltd.  
All right reserved. Unauthorized copying and  
distribution is a violation of law.

# CONTENTS

1 OVERVIEW .....	1-1
General .....	1-1
System Configurations (Example).....	1-1
Specifications .....	1-2
Memory Map .....	1-6
I/O Port Map.....	1-7
Interrupt Level .....	1-8
Pin assignments.....	1-9
Appendix B : Dip Switches and Jumpers .....	1-16
2 Description of Operation .....	2-1
JS-170FR Block Diagram .....	2-1
Description of Main PCB Circuits .....	2-2
2.1.1 CPU PENTIUM-II 266MHz or 333MHz (Refer to the page 4-1.) .....	2-2
2.1.2 Chip set FW82443BX, FW82371EB (Refer to the page 4-1 and page 4-3.).....	2-2
2.1.2.1 FW82371EB Pin Assignment.....	2-3
2.1.2.2 RTC (Real Time Clock) circuit.....	2-9
2.1.2.3 IDE interface.....	2-10
2.1.2.4 USB interface.....	2-12
2.1.3 Main RAM circuit.....	2-13
2.1.4 BIOS ROM.....	2-14
2.1.5 IT8673F circuit.....	2-15
2.1.5.1 IT8673F Pin Assignment .....	2-16
2.1.5.2 Serial port (COM1, 2).....	2-18
2.1.5.3 Parallel port interface circuit .....	2-20
2.1.5.4 FDD interface circuit .....	2-21
2.1.5.5 Keyboard controller circuit .....	2-23
2.1.5.6 PS/2 mouse controller circuit.....	2-25
2.1.6 Serial port (COM3, 4).....	2-26
2.1.7 VGA circuit (Refer to the page 4-4.) .....	2-28
2.1.7.1 SM710 Pin Assignment .....	2-29
2.1.7.2 LCD interface circuit (Refer to the page 4-4.).....	2-33
2.1.7.3 Back-Lite control circuit .....	2-34
2.1.7.4 CRT interface .....	2-35
2.1.8 Piezoelectric buzzer circuit .....	2-36
2.1.9 Hardware reset circuit.....	2-37
2.1.10 Clock.....	2-38

2.1.11	CPU_POWER .....	2-39
2.1.12	ETHERNET interface circuit .....	2-40
2.1.13	Touch panel interface circuit .....	2-41
2.1.14	Magnetic card reader interface circuit .....	2-42
2.1.15	Cash-Drawer interface circuit .....	2-45
2.1.16	Customer display interface .....	2-46
2.1.17	Power ON/OFF circuit.....	2-47
2.1.17.1	Power ON .....	2-47
2.1.17.2	Power OFF .....	2-48
2.1.17.3	Battery backup circuit .....	2-49
2.1.18	GATEARRAY ( $\mu$ PD65884GM-019-BED) (Refer to the page 4-8).....	2-51
2.1.18.1	Internal functions .....	2-51
2.1.18.2	GATEARRAY Pin Assignment .....	2-51
2.1.19	Optional interface (Refer to the page 4-5 CN7).....	2-54
3	Test Program and Power Supply Check.....	3-1
3.1	Voltage checks on the MAIN PWB .....	3-1
3.2	Oscillation frequency check .....	3-2
3.3	POWER switch / FRONT switch check .....	3-2
3.4	Backup function check.....	3-3
3.5	Current consumption check.....	3-4
3.6	BIOS setup.....	3-4
3.7	Method of diagnostic program starting .....	3-9
3.8	Execution of diagnostic services.....	3-11
3.9	Materials for Reference .....	3-48
4	JS-170FR-**PCB's .....	4-1
4.1	Main PCB.....	4-1
4.2	MB PCB .....	4-17
4.3	Peripheral PCB .....	4-20
5	Body Block .....	5-1
5.1	Body Block Disassembling Drawing .....	5-1
5.2	Body Block Replacement Parts List.....	5-7
6	Packing .....	6-1
6.1	Packing .....	6-1

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/panasonic/JS-170FR service manual.html](https://the-checkout-tech.com/manuals/panasonic/JS-170FR_service_manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)