 


ER-150

SAMSUNG

ELECTRONIC CASH REGISTER

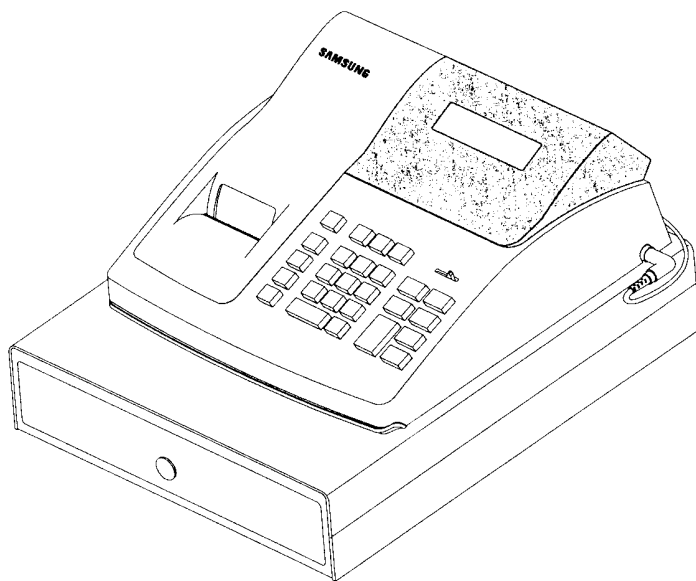

OPERATION MANUAL

All specifications are object to change without notice.



SAFETY NOTICE

The socket-outlet shall be installed near the equipment and shall be easily accessible.

P/Z MODE SIGN ON CODE PROGRAMMING

The ER-150 has the added feature of an extra security function to limit access to certain phases of operation.

 
Through optional programming, you may require a four digit code before allowing access to the **Z** and **P** Programming modes.

When the mode switch is changed to a protected mode, the buzzer sounds until the switch is returned to an unprotected mode. If no mode protection is required then you may disregard this section.


TO ESTABLISH OR CHANGE THE SECRET CODE

1. Switch the mode lock to the "X" position, press No Sale(#/NS), enter the four digit code,
 - press the **RA** key for **Z** mode protection.
 - press the **PO** key for **P** mode protection.

ESTABLISHES CODE FOR Z MODE

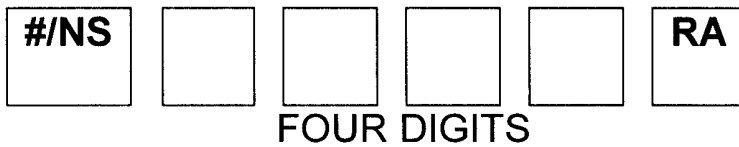

ESTABLISHES CODE FOR P MODE

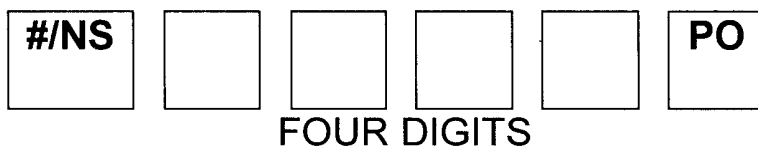 

NOTE : THE FOUR DIGIT CODE PROTECTION
CAN BE DISABLED BY ENTERING BEFORE
ZERO'S AS THE CODE NUMBER USING THE
SAME SEQUENCE AS ABOVE.

2. To enter the **Z** or **P** modes once protection is established, place the mode switch in the "X" position and press the (-) minus key, enter your four digit code and press the % discount key.
-

TABLE OF CONTENTS

| | |
|--|-----------|
| INITIAL SET UP INSTRUCTIONS | 1 |
| UNPACK THE CASH REGISTER | 1 |
| INSTALL AND REPLACE BATTERIES | 1 |
| CLEAR RANDOM ACCESS MEMORY (RAM) AND INITIALIZE CASH REGISTER | 2 |
| LOAD PAPER | 2 |
| HOW TO REPLACE THE INK ROLLER | 3 |
| FEATURES | 4 |
| MODE SWITCH | 4 |
| DISPLAY | 4 |
| KEYBOARD | 5 |
| KEY FUNCTIONS | 5 |
| PROGRAMMING | 7 |
| TAX, DECIMAL POINT INFORMATION | 7 |
| DEPARTMENT STATUS | 7 |
| TAX RATE..... | 8 |
| SETTING THE PERCENT (%) KEY | 8 |
| SETTING THE MACHINE NUMBER | 8 |
| RECEIPT PRINT / JOURNAL PRINT | 9 |
| ROUNDING OPTION | 9 |
| SYSTEM OPTIONS | 10 |
| OPTION 1 | 10 |
| OPTION 2 | 10 |
| SETTING THE DATE | 11 |
| REGISTER MODE OPERATIONS | 11 |
| NO SALE OPERATIONS | 12 |
| NON ADD NUMBER ENTRIES | 12 |
| DEPARTMENT OPERATION | 13 |
| MULTIPLE ITEM DEPARTMENT ENTRY | 13 |

| | |
|---|-----------|
| SINGLE ITEM DEPARTMENT SALES | 13 |
| MINUS (-) KEY OPERATION | 14 |
| MULTIPLE MINUS OPERATION | 14 |
| MINUS SINGLE OPERATION | 14 |
| PERCENT DISCOUNT OPERATION | 15 |
| PERCENT DISCOUNT ON ITEM | 15 |
| PERCENT DISCOUNT ON ENTIRE SALE | 15 |
| MERCHANDISE RETURN OPERATION | 16 |
| VOID OPERATION | 16 |
| LAST ITEM VOID / ERROR CORRECT | 16 |
| PREVIOUS ITEM VOID | 17 |
| TENDERING OPERATION | 17 |
| CASH TENDER | 17 |
| AMOUNT TENDERED ON CASH | 17 |
| CHARGE TENDER | 18 |
| SPLIT TENDER | 18 |
| RECEIVED ON ACCOUNT (RA) OPERATION | 18 |
| PAID OUT (PO) OPERATION | 18 |
| | |
| MANAGEMENT REPORTS AND BALANCING | 19 |
| CASH IN DRAWER DECLARATION | 19 |
| FINANCIAL DAILY REPORT | 20 |
| P-T-D GRAND TOTAL REPORT | 20 |
| SYSTEM BALANCING | 21 |
| | |
| MAINTENANCE | 21 |
| | |
| SPECIFICATIONS | 22 |
| DIMENSIONS | 22 |
| DRAWER | 22 |
| MODE KEY | 22 |
| KEYBOARD | 22 |
| PRINTER | 22 |
| DISPLAY | 22 |
| POWER | 22 |

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)