 


ER-5100

SAMSUNG

ELECTRONIC CASH REGISTER

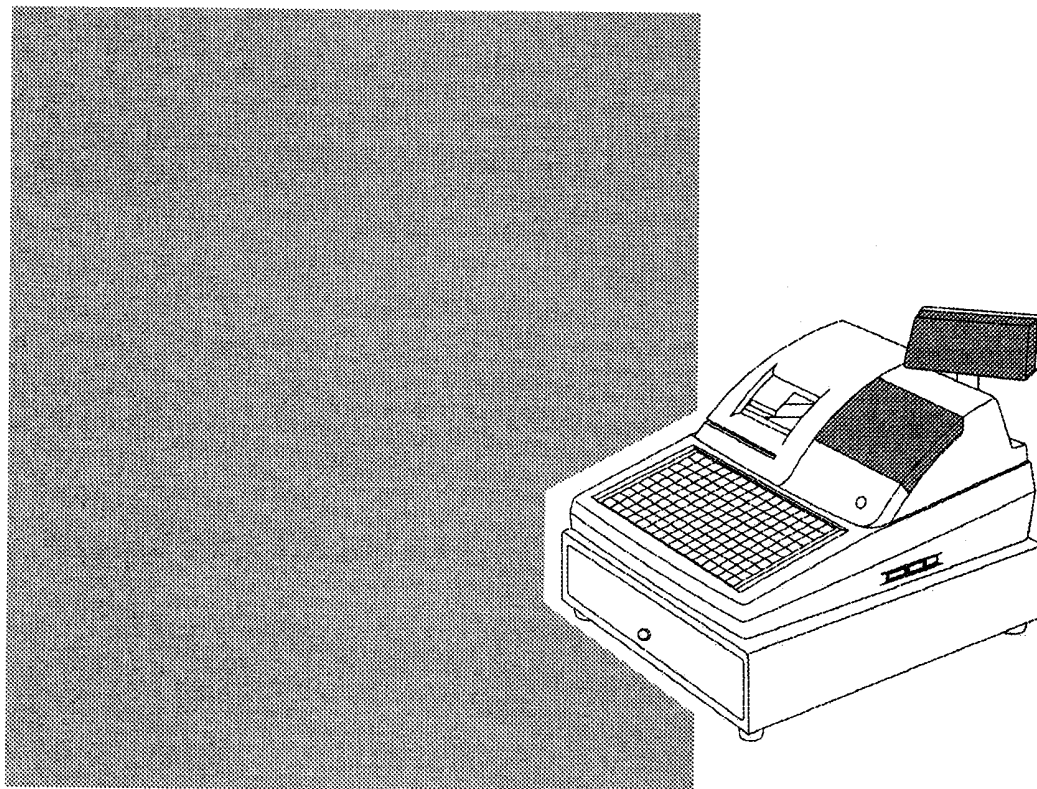

Programming & Operating Manual

All specifications are subject to change without notice.

 
UNPACKING AND STARTING UP

STEP 1 UNPACKING THE CASH REGISTER

- (1) **Unpack and unwrap** your cash register.
- (2) The following items are **in the packing**.
 - **2 paper rolls**
 - **1 rewind spindle**
 - **1 ribbon cartridge**
- (3) **Remove cardboard protectors** from the cash drawer.

STEP 2 INSERTING THE PRINTER RIBBON CARTRIDGE

- (1) Locate the **printer cover key**. The printer cover key is **the smallest** on the key ring.
Insert this key into the **printer cover lock**. **Turn the key** and then **remove the printer cover**.
- (2) Locate the **ribbon cartridge** as shown in the illustration.
- (3) **Insert the ribbon cartridge** and press firmly into the place.
Remove any slack in the ribbon by rotating the cartridge knob counter-clockwise.

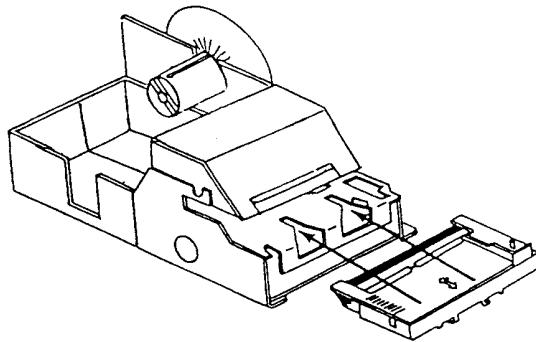


STEP 3 PUTTING THE PAPER IN THE PRINTER


STEP 3.1 LOADING THE DETAIL PRINTER

- (1) **Plug** the cash register's power cord into the properly grounded wall socket.
- (2) Place the **key marked 'REG'** into the control lock and turn to the **"REG" position**.
- (3) Locate the **black plastic rewind spindle** in the Styrofoam.
- (4) As you face the keyboard, **notice two plastic trays** at the bottom of the printer compartment.
Place one of the paper rolls into the tray on the right.
Make sure the paper will unwind from the bottom of the roll.
- (5) **Fold back about 6 inches of paper** and **insert the folded end of the tape** into the feed slot just in front of the paper tray at the rear of the printer.
- (6) **Press** the **"DETAIL FEED"** key on the keyboard until the edge has fed through the printer.
Run 6 ~ 8 inches of paper through the printer.
- (7) **Hold the black rewind spindle** with the gear to the right and the shaft to the left.
Insert the end of the paper into the slot on the shaft of the rewind spindle.
Wind the spindle several times to be sure that the paper will stay on the spindle.
- (8) **Slide the axle of the rewind spindle** (between the gear and the shaft) into the notch of the printer housing.
- (9) **Press** the **"DETAIL FEED"** key several times again to make sure that the paper moves properly through the printer.

 NOTE : The socket-outlet shall be near the equipment and it shall be easy accessible.

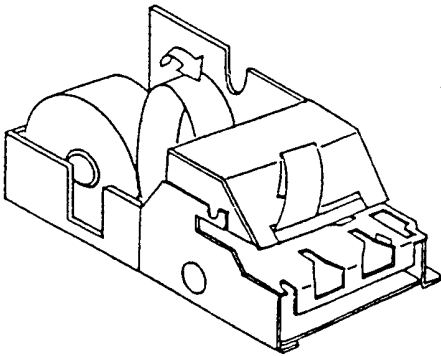


* LOADING DETAIL PAPER *

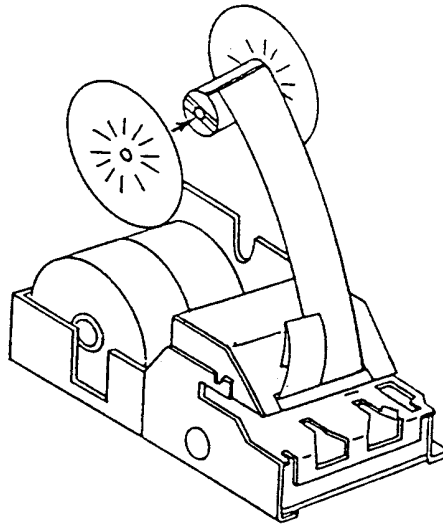 

* LOADING RECEIPT PAPER *

< THE FABRICATION OF REWIND SPINDLE >

 
- (1) Locate the black plastic rewind spindle (A) in the Styrofoam.
- (2) Locate the black plastic rewind spindle (B) in the manual bag.
- (3) Fabricate the black plastic rewind spindle (A) and (B) as shown in the illustration.

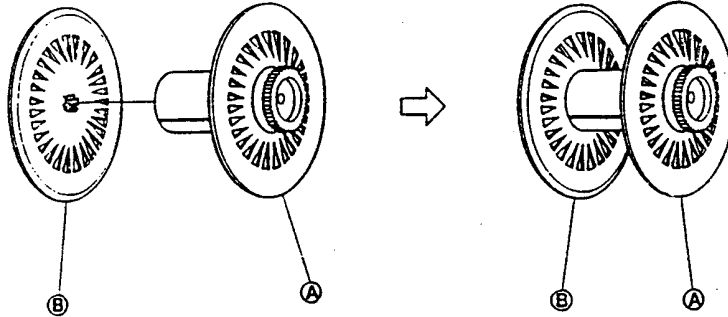

STEP 3.2 LOADING THE RECEIPT PRINTER

- (1) **Place the other paper rolls** into the small tray on the left.
Make sure the paper will unwind from the bottom of the roll.
- (2) **Fold back about 6 inches of paper** and insert the folded end of the tape into the feed slot just in front of the paper tray at the rear of the printer.
- (3) **Press the "RECEIPT FEED" key** on the keyboard until the paper comes through the printer.
Run 3 ~ 4 inches of paper through the printer.
- (4) **Replace the printer cover** and make sure that the receipt paper comes out through the opening in the printer cover.

 NOTE : Do not pull the paper back through the printer as this may damage it.

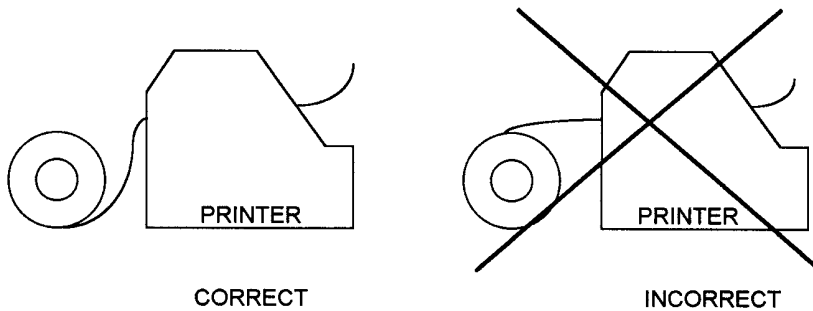

STEP 4 CLEARING THE RAM (RANDOM ACCESS MEMORY)

- (1) **Unplug** the cash register.
- (2) Locate the **control lock key** marked 'C'.
- (3) **Insert the key** into the control lock and **turn clockwise, past the "P" position** to the **"SERVICE MODE"** position.
This position is not marked on the control lock, but the 'C' key can travel to this position.
- (4) **Hold down** the "00" key on the keyboard.
While holding the "00" key down, **plug** the cash register's **power cord** into properly grounded wall socket.

Continue to hold the "00" key down until the receipt printer stops printing and the display shows 0.00.

!! The cash register is now ready to operate. !!

WARNING : Clearing the RAM is essential before you program the cash register for the first time. However once the cash register is programmed and operated, clearing the RAM will cause all programs and totals to be lost.

WARNING : Do not open the printer cover while operating the cash register. Do not operate the cash register without the ribbon cartridge.

NOTE : When you firstly configure the cash register, it is recommended that the register remains powered on in the "REG" mode for at least 24 hours. This allows the Ni-Cad battery, which maintains the memory of the machine while the power is off, to charge completely.

TABLE OF CONTENTS

UNPACKING AND STARTING UP	1
FEATURES	9
KEYBOARD LAYOUT	10
FUNCTION KEY DESCRIPTION	11
CONTROL LOCK	13
CONTROL KEYS	13
DISPLAY	14
DISPLAY SYMBOLS	14
PROGRAMMING NOTE	16
1 SERVICE MODE PROGRAMMING	16
1.1 RAM CLEARING	16
1.1.1 INITIAL CLEAR	16
1.1.2 CLEARING TOTALS FROM MEMORY	17
1.2 SETTING THE DEPARTMENTS ORDER	18
2 P MODE PROGRAMMING	19
2.1 DATE & TIME PROGRAMMING	19
2.1.1 DATE PROGRAMMING	19
2.1.2 TIME PROGRAMMING	19
2.2 REGISTER NUMBER PROGRAMMING	19
2.3 TAX PROGRAMMING	20
2.4 VAT RATE PROGRAMMING	20
2.5 DEFAULT LEVEL PROGRAMMING	21
2.6 CLERK SECRET CODE & DRAWER ASSIGNMENT PROGRAMMING	21
2.7 DESCRIPTOR PROGRAMMING	22
2.7.1 PROGRAMMING	22
2.7.2 DESCRIPTOR PROGRAMMING EXAMPLES	23
2.7.3 DESCRIPTOR PROGRAMMING SCAN	24
2.8 DEPARTMENT PROGRAMMING	25
2.8.1 DEPARTMENT STATUS PROGRAMMING	25
2.8.2 DEPARTMENT PRICE OR HALO PROGRAMMING	26
2.8.3 DEPARTMENT PROGRAMMING EXAMPLES	27
2.8.4 DEPARTMENT PROGRAMMING SCAN	29
2.9 PLU PROGRAMMING	30
2.9.1 PLU PROGRAMMING	30
2.9.2 PLU PROGRAMMING EXAMPLES	32
2.9.3 PLU PROGRAMMING SCAN	33

2.9.4	PLU LINK PROGRAMMING	34
2.9.5	REMOVING OR DELETING A PLU	35
2.10	% KEY PROGRAMMING	35
2.10.1	% KEY PROGRAMMING	35
2.10.2	% CALCULATION ROUNDING FACTOR	35
2.11	CASH/TEND KEY PROGRAMMING	36
2.12	CHECK KEY PROGRAMMING	36
2.13	CHARGE KEY PROGRAMMING	36
2.14	PRESET CASH KEY PROGRAMMING	36
2.15	CASH IN DRAWER LIMIT PROGRAMMING	36
2.16	CURRENCY CONVERSION KEY PROGRAMMING	37
2.17	EUROPEAN ROUNDING PROGRAMMING	37
2.18	SYSTEM OPTION PROGRAMMING	38
2.19	PARAMETERS PROGRAM SCAN	43
OPERATING NOTE		44
1	CLERK SIGN ON	44
1.1	IN CASE OF 4 CLERKS (SYSTEM OPTION 28's VALUE 'C' = 0)	44
1.1.1	PUSH BUTTON SIGN ON	44
1.1.2	SECRET CODE SIGN ON	44
1.2	IN CASE OF 15 CLERKS (SYSTEM OPTION 28's VALUE 'C' = 4)	44
1.2.1	PUSH BUTTON SIGN ON	44
1.2.2	SECRET CODE SIGN ON	45
2	CLERK SIGN OFF	45
2.1	IN CASE OF 4 CLERKS (SYSTEM OPTION 28's VALUE 'C' = 0)	45
2.2	IN CASE OF 15 CLERKS (SYSTEM OPTION 28's VALUE 'C' = 4)	45
3	REAL CLERK KEY ENTRY	45
4	CLEARING AN ERROR CONDITION	45
5	NO SALE OPERATION	46
6	NON-ADD NUMBER ENTRIES	46
7	PRICE INQUIRY OPERATION	46
8	DEPARTMENT ENTRIES	47
8.1	OPEN DEPARTMENT ENTRIES	47
8.2	PRESET DEPARTMENT ENTRIES	48
8.3	GALLONAGE DEPARTMENT ENTRIES	49
9	PLU (PRICE LOOK UP) ENTRIES	49
9.1	OPEN PLU ENTRIES	49
9.2	PRESET PLU ENTRIES	51

9.3	PLU TO PLU CHAIN OPERATION	52
9.4	PLU ENTRIES BY CODE	52
10	SINGLE ITEM DEPARTMENT OR PLU ENTRIES	53
10.1	SINGLE ITEM PRESET ENTRIES	53
10.2	SINGLE ITEM OVERRIDE ENTRIES	53
11	COMPUTATION OF VAT (Value Added Tax)	53
11.1	INCLUSIVE VAT SYSTEM	53
11.2	EXCLUSIVE VAT SYSTEM	54
12	% KEY ENTRIES	55
12.1	PERCENT RATE DISCOUNT / SURCHARGE	55
12.1.1	ITEM DISCOUNT / SURCHARGE	55
12.1.2	SALE DISCOUNT / SURCHARGE	55
12.2	AMOUNT DISCOUNT / SURCHARGE	56
12.2.1	ITEM DISCOUNT / SURCHARGE	56
12.2.2	SALE DISCOUNT / SURCHARGE	56
13	MERCHANDISE RETURN OPERATION	57
14	VOID OPERATION	57
14.1	VOID OF A LAST ITEM ENTRY (ERROR CORRECT)	57
14.2	VOID OF A PREVIOUS ITEM ENTRY	57
14.3	VOID OUTSIDE OF A SALE	58
14.4	CANCEL (VOID 4)	58
15	ADD CHECK OPERATION	59
16	TENDERING OPERATION	59
16.1	CASH TENDERING	59
16.2	PRESET CASH TENDERING	60
16.3	CHECK TENDERING	60
16.4	CHARGE TENDERING	61
16.5	SPLIT TENDERING	61
16.6	TENDERING WITH CURRENCY CONVERSION	62
16.7	POST TENDERING	62
17	EAT IN / TAKE OUT / DRIVE THRU OPERATION	63
18	CHECK CASHING	63
19	RECEIVED ON ACCOUNT OPERATION	64
20	PAID OUT OPERATION	64
21	TABLE MANAGEMENT	65
21.1	TRANSACTION	65
21.2	CONSOLIDATED RECEIPT PRINTING	65
22	CASHIER OVERLAP	68

22.1 TRANSACTION	68
22.2 CONSOLIDATED RECEIPT PRINTING	68
23 PRINTING A BUFFERED RECEIPT OPERATION	71
24 VALIDATION OPERATION	72
25 RECEIPT MESSAGE PRINTING OPERATION	73
25.1 PREAMBLE MESSAGE	73
25.2 POSTAMBLE MESSAGE	73
26 TRAIN MODE	73
REPORT AND BALANCING	74
1 REPORT MODES	75
2 CASH DECLARATION	75
3 REPORTS	76
3.1 OPEN TABLE (OR OPEN CLERK) REPORT	76
3.2 FINANCIAL REPORT	77
3.3 TIME REPORT	80
3.4 PLU REPORT	81
3.5 FROM / TO PLU REPORT	81
3.6 IN-DRAWER REPORT	82
3.7 DAILY SALES REPORT	82
3.8 INDIVIDUAL CLERK REPORT	83
3.9 FROM / TO DEPARTMENT REPORT	85
3.10 DEPARTMENT REPORT	85
TROUBLE SHOOTING	86
MEMORY PROTECTION BATTERY	86
SPECIFICATION	86
APPENDIX	87
1 CHARACTER CODE TABLE	87
2 ALPHA-NUMERIC KEYBOARD LAYOUT	88
3 COMMUNICATION INTERFACE	89
3.1 PIN DESCRIPTION FOR SERIAL INTERFACE	89
3.2 CABLE SPECIFICATION	89
4 COMMUNICATION WITH PC	90
5 PRINTING ON THE ROLL PRINTER	90
6 SCALE	91
6.1 DIRECT SCALE ENTRY	91
6.2 MANUAL WEIGHT ENTRY	91

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)