
ER-5200/40/15

 
 
Operation and Program Manual

All specificaitons are subject to change without notice

Precaution Statements

Follow these safety, servicing and ESD precautions to prevent damage and to protect against potential hazards such as electrical shock.

1-1 Safety Precautions

1. Be sure that all built-in protective devices are replaced. Restore any missing protective shields.
2. When reinstalling the chassis and its assemblies, be sure to restore all protective devices, including nonmetallic control knobs and compartment covers.
3. Make sure there are no cabinet openings through which people - particularly children - might insert fingers and contact dangerous voltages. Such openings include excessively wide cabinet ventilation slots and improperly fitted covers and drawers.
4. Design Alteration Warning:
Never alter or add to the mechanical or electrical design of the SECR. Unauthorized alterations might create a safety hazard. Also, any design changes or additions will void the manufacturer's warranty.
5. Components, parts and wiring that appear to have overheated or that are otherwise damaged should be replaced with parts that meet the original specifications. Always determine the cause of damage or over- heating, and correct any potential hazards.
6. Observe the original lead dress, especially near the following areas : sharp edges, and especially the AC and high voltage supplies. Always inspect for pinched, out-of-place, or frayed wiring. Do not change the spacing between comp-onents and the printed circuit board. Check the AC power cord for damage. Make sure that leads and components do not touch thermally hot parts.
7. Product Safety Notice:
Some electrical and mechanical parts have special safety-related characteristics which might not be obvious from visual inspection. These safety features and the protection they give might be lost if the replacement component differs from the original - even if the replacement is rated for higher voltage, wattage, etc.
Components that are critical for safety are indicated in the circuit diagram by shading, () or (). Use replacement components that have the same ratings, especially for flame resistance and dielectric strength specifications. A replacement part that does not have the same safety characteristics as the original might create shock, fire or other hazards.

CAUTION

Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type recommended by the manufacturer.

Dispose used batteries according to the manufacturer's instructions.

ATTENTION

Il y a danger d'explosion s'il y a un remplacement incorrect de la batterie.

Remplacer uniquement avec une batterie du même type ou d'un type équivalent recommandé par le constructeur.

Mettre au rebut les batteries usagées conformément aux instructions du fabricant.

1-2 Servicing Precautions

WARNING: First read the-Safety Precautions-section of this manual. If some unforeseen circumstance creates a conflict between the servicing and safety precautions, always follow the safety precautions.

WARNING: An electrolytic capacitor installed with the wrong polarity might explode.

1. Servicing precautions are printed on the cabinet. Follow them.
2. Always unplug the units AC power cord from the AC power source before attempting to:
 - (a) Remove or reinstall any component or assembly
 - (b) Disconnect an electrical plug or connector
 - (c) Connect a test component in parallel with an electrolytic capacitor
3. Some components are raised above the printed circuit board for safety. An insulation tube or tape is sometimes used. The internal wiring is sometimes clamped to prevent contact with thermally hot components. Reinstall all such elements to their original position.
4. After servicing, always check that the screws, components and wiring have been correctly reinstalled. Make sure that the portion around the serviced part has not been damaged.
5. Check the insulation between the blades of the AC plug and accessible conductive parts (examples : metal panels and input terminals).
6. Insulation Checking Procedure:
Disconnect the power cord from the AC source and turn the power switch ON. Connect an insulation resistance meter (500V) to the blades of AC plug.
The insulation resistance between each blade of the AC plug and accessible conductive parts (see above) should be greater than 1 megohm.
7. Never defeat any of the B+ voltage interlocks. Do not apply AC power to the unit (or any of its assemblies) unless all solid-state heat sinks are correctly installed.
8. Always connect an instrument's ground lead to the instrument chassis ground before connecting the positive lead ; always remove the instrument's ground lead last.

1-3 Precautions for Electrostatically Sensitive Devices (ESDs)

1. Some semiconductor (solid state) devices are easily damaged by static electricity. Such components are called Electrostatically Sensitive Devices (ESDs); examples include integrated circuits and some field-effect transistors. The following techniques will reduce the occurrence of component damage caused by static electricity.
2. Immediately before handling any semiconductor components or assemblies, drain the electrostatic charge from your body by touching a known earth ground. Alternatively, wear a discharging wrist-strap device. (Be sure to remove it prior to applying power - this is an electric shock precaution.)
3. After removing an ESD-equipped assembly, place it on a conductive surface such as aluminum foil to prevent accumulation of electrostatic charge.
4. Do not use freon-propelled chemicals. These can generate electrical charges that damage ESDs.
5. Use only a grounded-tip soldering iron when soldering or unsoldering ESDs.
6. Use only an anti-static solder removal device. Many solder removal devices are not rated as anti-static; these can accumulate sufficient electrical charge to damage ESDs.
7. Do not remove a replacement ESD from its protective package until you are ready to install it. Most replacement ESDs are packaged with leads that are electrically shorted together by conductive foam, aluminum foil or other conductive materials.
8. Immediately before removing the protective material from the leads of a replacement ESD, touch the protective material to the chassis or circuit assembly into which the device will be installed.
9. Minimize body motions when handling unpackaged replacement ESDs. Motions such as brushing clothes together, or lifting a foot from a carpeted floor can generate enough static electricity to damage an ESD.

Contents

- Getting Started** **1**
 - About the *ER-5200* Series 1
 - Unpacking..... 2
 - Installing the Paper 2
 - Basic Features and Functions 6
 - Standard Hardware 6
 - Optional Hardware 6
 - Software Features 6
 - Display 7
 - Control Lock 11
 - Keyboards..... 12

- Operating Instructions** **15**
 - Function Key Descriptions 15
 - Clerk Sign-On/Sign-Off 19
 - Direct Sign-On 19
 - Coded Sign-On..... 19
 - Receipt On and Off..... 20
 - Item Registrations..... 21
 - Open Keyboard PLU Entry 22
 - Preset Price Keyboard PLU..... 22
 - Keyboard PLU Repeat Entry..... 23
 - Keyboard PLU Multiplication..... 24
 - Keyboard PLU Multiplication with Decimal Point..... 25
 - Split Pricing (Keyboard PLU)..... 26
 - Single Item Keyboard PLU 27
 - Open Code Entry PLU 28
 - Preset Price Code Entry PLU 28
 - Code Entry PLU Multiplication 29
 - Code Entry PLU Multiplication with Decimal Point 30
 - Split Pricing Code Entry PLU 30
 - Modifier Key 31
 - Price Level Key..... 32
 - Promo 33
 - Waste..... 34
 - Shifting or Exempting Tax 35
 - Shifting Tax..... 35
 - Exempting Tax 36
 - Percent Key Operations 38
 - Preset Percent Discount on an Item..... 38
 - Enter a Percent Discount on an Item 39
 - Percent on Sale Total..... 39
 - Coupon on Sale (Vendor Coupon)..... 40

Coupon on Item (Store Coupon)	41
Return Merchandise Registrations	42
Voids and Corrections	43
Error Correction (Void Last Item)	43
Void Previous Item	43
Cancel	44
Void Position Operations	44
No Sale Operations	45
Open Drawer	45
Non Add Number	45
Received On Account Operations	46
Paid Out Operations	47
Subtotaling a Sale	48
Eat In/Take Out/Drive Thru Sales	48
Totaling and Tendering	49
Totaling a Cash Sale	49
Totaling a Check Sale	49
Tendering a Cash Sale	50
Tendering a Check Sale	50
Totaling a Charge Sale	51
Tendering a Charge Sale	52
Check Cashing	53
Split Tender	54
Post Tender	55
Food Stamp Sales	56
Currency Conversion	57
Table Management and Clerk Interrupt Operations	58
Overview	58
Posting Balances Manually	59
Soft Check	61
Hard Check	64
Direct Scale Entry	67
Automatic Scale Entry	68
Tare Weight Entry	68
Manual Tare Weight Entry	69
Manual Weight Entry	70

X Mode 71

Introduction	71
X Reports	72
Running a Report - General Instructions	72
Report Table	73
Cash Declaration	74

Service Mode Programming 75

Overview	75
Memory Allocation Scan	76
Pc Online Mode	76
Pc Memory Allocation	77
Clear Total	78
Clear Grand Total	78
Clear PLU File	78
Eprom Information	78

Function Key Assignment Programming	79
Function Key Codes	80
RS232C Port 1/RS232C Port 2 Options	81

Program Mode Programming 83

Default Programming	83
Descriptor Programming Methods.....	83
Program Overlay Method	84
Descriptor Code Method	85
Tax Programming	86
Straight Percentage Tax Rate Programming	86
PLU Programming.....	88
Program 100 - PLU Status Programming.....	89
Program 110 - PLU Auto Tare Programming	92
Program 150 - PLU Group Assignment	93
Program 200 - PLU Price/HALO Programming	94
Program 250 - PLU Stock Amount Programming	95
Program 300 - PLU Description Programming	96
Program 350 - PLU Link Programming.....	97
Program 400 - PLU Delete Programming	98
Program 450 - PLU MIX & MATCH Programming	99
System Option Programming.....	100
System Option Table	101
Print Option Programming	104
Print Option Table.....	105
Function Key Programming	109
Program 70 - Function Key Options	110
Program 80 - Function Key Descriptor	111
Program 90 - Function Key HALO.....	112
ADD CHECK.....	113
CANCEL.....	114
CASH	115
CHARGE1-8	116
CHECK	117
CHECK CASHING.....	118
CHECK ENDORSEMENT.....	119
CHECK #	120
CURRENCY CONVERSION	121
DRIVE THRU / EAT IN / TAKE OUT	122
ERROR CORRECT	123
F/S SUB.....	123
F/S TEND.....	124
GUEST	125
LEVEL1-2.....	125
#/NS.....	126
RETURN.....	127
MODIFIER 1-5	128
PAYMENT.....	129
PBAL.....	129
PROMO.....	130
PAID OUT1-3	131
PRINT CHECK.....	132
RECD ON ACCT1-3.....	133
SCALE	134

SERVICE	135
SUBTOTAL	136
TABLE	136
TARE.....	137
TAX EXEMPT.....	138
TIP	139
VALIDATE.....	140
VOID	141
WASTE	142
%1- %5	143
Clerk Programming.....	145
Program 800 - Secret Code Programming.....	146
Program 801 - Drawer Assignment & Training Clerk	147
Program 810 – Clerk Description Programming	148
Mix & Match Programming.....	149
Program 600 - Trip Level Programming	150
Program 601 - Price Programming	150
Program 610 - Mix & Match Description Programming.....	151
Group Programming	152
Miscellaneous Programming	154
Macro Key Sequence Programming.....	154
Logo Description Programming	155
NLU Code Number Programming	162
Cash-In-Drawer Limit Programming	163
Check Change Limit Programming.....	164
Date and Time Programming.....	165
Scale Tare Weight Programming	166
Machine Number Programming	167
Program Scans	168

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)