

SAM4S

ER-5215M Electronic Cash Register

Operator's and Programming Manual



All specifications are subject to change without notice.

©2005, CRS, Inc.
M-ER5215M Version 2.4

CRS, Inc.

Limited Warranty and Disclaimers of Warranty

This manual has been developed by CRS, Inc. It is intended for the use of its customers and service personnel and should be read in its entirety before attempting to install, use or program the product(s).

Nothing contained in this manual shall be deemed to be, and this manual does not constitute, a warranty of, or representation with respect to, the product or any of the products to which this manual applies. This manual is subject to change without notice and CRS, Inc. has no obligation to provide any updates or corrections to this manual. Further, CRS, Inc. also reserves the right, without prior notice, to make changes in equipment design or components as it deems appropriate. No representation is made that this manual is complete or accurate in all respects and CRS, Inc. shall not be liable for any errors or omissions contained in this manual. In no event shall CRS, Inc. be liable for any incidental or consequential damages relating to or arising out of the use of this manual. This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied or reproduced without prior written consent of CRS, Inc.

NOTICE

IF ANY WARRANTY IS EXTENDED TO YOU WITH REGARD TO THE PRODUCT(S) TO WHICH THIS MANUAL APPLIES, IT IS A WARRANTY FROM THE ENTITY OR INDIVIDUAL FROM WHOM YOU DIRECTLY PURCHASED THE PRODUCT(S).

SUBJECT TO THE FOREGOING, UNLESS YOU ARE A DIRECT END USER CUSTOMER OF CRS, INC., CRS, INC. DOES NOT EXTEND TO YOU ANY EXPRESS WARRANTY OR ANY IMPLIED WARRANTY AND EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR USE, OR FITNESS FOR ANY PARTICULAR PURPOSE, OR ANY WARRANTY OF NON-INFRINGEMENT OF INTELLECTUAL PROPERTY RIGHTS IN CONNECTION WITH THE PRODUCT(S) OR ANY SOFTWARE, DRIVERS, OR PROGRAMMING PRODUCT, WHETHER EMBEDDED IN PRODUCT(S) OR PROVIDED AS A SEPARATE PROGRAM, OR USED IN CONJUNCTION WITH THIS/THESE PRODUCT(S). CRS, INC. SPECIFICALLY DOES NOT WARRANT THAT THE OPERATION OF ANY DRIVERS, SOFTWARE, OR PROGRAMMING PRODUCTS LICENSED HEREUNDER, WHETHER EMBEDDED IN PRODUCTS OR PROVIDED AS SEPARATE PROGRAMS, SHALL BE UNINTERRUPTED OR ERROR FREE OR THAT FUNCTIONS CONTAINED IN SUCH DRIVERS, SOFTWARE OR PROGRAMMING PRODUCTS SHALL OPERATE IN COMBINATION(S) WHICH MAY BE SELECTED FOR USE BY YOU OR OTHERWISE MEET YOUR REQUIREMENTS.

CRS, Inc. is not responsible for any damages or loss, either direct, indirect, special, incidental or consequential, which you may experience as a result of your purchase or use of the product(s). Your sole remedy in the event that you encounter any difficulties with the product(s) is against the entity or individual from whom you purchased the product(s).

Revision 2.0 - April 1, 2005

WARNING - U.S.

THIS EQUIPMENT GENERATES, USES AND CAN RADIATE RADIO FREQUENCY ENERGY, AND IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS MANUAL, MAY CAUSE INTERFERENCE TO RADIO COMMUNICATIONS. IT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS A COMPUTING DEVICE PURSUANT TO SUBPART J OF PART 15 OF FCC RULES WHICH ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST SUCH INTERFERENCE WHEN OPERATED IN A COMMERCIAL ENVIRONMENT. OPERATIONS OF THE EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE INTERFERENCE IN WHICH CASE THE USER, AT HIS OWN EXPENSE, WILL BE REQUIRED TO TAKE WHATEVER MEASURES MAY BE REQUIRED TO CORRECT THE INTERFERENCE.

NOTICE - CANADA

THIS APPARATUS COMPLIES WITH THE CLASS "A" LIMITS FOR RADIO INTERFERENCE AS SPECIFIED IN THE CANADIAN DEPARTMENT OF COMMUNICATIONS RADIO INTERFERENCE REGULATIONS.

CET APPAREIL EST CONFORME AUX NORMES CLASS "A" D'INTERFERENCE RADIO TEL QUE SPECIFIER PAR MINISTRE CANADIEN DES COMMUNICATIONS DANS LES REGLEMENTS D'INTERFERENCE RADIO.

ATTENTION

 
 
The product that you have purchased may contain a battery that may be recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of the battery into the municipal waste system.

Check with your local solid waste officials for details concerning recycling options or proper disposal.

Precaution Statements

Follow these safety, servicing and ESD precautions to prevent damage and to protect against potential hazards such as electrical shock.

1-1 Safety Precautions

1. Be sure that all built-in protective devices are replaced. Restore any missing protective shields.
2. When reinstalling the chassis and its assemblies, be sure to restore all protective devices, including nonmetallic control knobs and compartment covers.
3. Make sure there are no cabinet openings through which people - particularly children - might insert fingers and contact dangerous voltages. Such openings include excessively wide cabinet ventilation slots and improperly fitted covers and drawers.
4. Design Alteration Warning:
Never alter or add to the mechanical or electrical design of the SECR. Unauthorized alterations might create a safety hazard. Also, any design changes or additions will void the manufacturer's warranty.
5. Components, parts and wiring that appear to have overheated or that are otherwise damaged should be replaced with parts that meet the original specifications. Always determine the cause of damage or over-heating, and correct any potential hazards.
6. Observe the original lead dress, especially near the following areas: sharp edges, and especially the AC and high voltage supplies. Always inspect for pinched, out-of-place, or frayed wiring. Do not change the spacing between components and the printed circuit board. Check the AC power cord for damage. Make sure that leads and components do not touch thermally hot parts.
7. Product Safety Notice:
Some electrical and mechanical parts have special safety-related characteristics that might not be obvious from visual inspection. These safety features and the protection they give might be lost if the replacement component differs from the original - even if the replacement is rated for higher voltage, wattage, etc.
Components that are critical for safety are indicated in the circuit diagram by shading, () or (). Use replacement components that have the same ratings, especially for flame resistance and dielectric strength specifications. A replacement part that does not have the same safety characteristics as the original might create shock, fire or other hazards.

CAUTION

Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type recommended by the manufacturer.

Dispose used batteries according to the manufacturer's instructions.

ATTENTION

Il y a danger d'explosion s'il y a remplacement incorrect de la batterie.

Remplacer uniquement avec une batterie du même type ou d'un type équivalent recommandé par le constructeur.

Mettre au rebut les batteries usagées conformément aux instructions du fabricant.

1-2 Servicing Precautions

WARNING: First read the-Safety Precautions-section of this manual. If some unforeseen circumstance creates a conflict between the servicing and safety precautions, always follow the safety precautions.

WARNING: An electrolytic capacitor installed with the wrong polarity might explode.

1. Servicing precautions are printed on the cabinet. Follow them.
2. Always unplug the units AC power cord from the AC power source before attempting to:
 - (a) Remove or reinstall any component or assembly
 - (b) Disconnect an electrical plug or connector
 - (c) Connect a test component in parallel with an electrolytic capacitor
3. Some components are raised above the printed circuit board for safety. An insulation tube or tape is sometimes used. The internal wiring is sometimes clamped to prevent contact with thermally hot components. Reinstall all such elements to their original position.
4. After servicing, always check that the screws, components and wiring have been correctly reinstalled. Make sure that the portion around the serviced part has not been damaged.
5. Check the insulation between the blades of the AC plug and accessible conductive parts (examples : metal panels and input terminals).
6. Insulation Checking Procedure:

Disconnect the power cord from the AC source and turn the power switch ON. Connect an insulation resistance meter (500V) to the blades of AC plug.

The insulation resistance between each blade of the AC plug and accessible conductive parts (see above) should be greater than 1 megohm.
7. Never defeat any of the B+ voltage interlocks. Do not apply AC power to the unit (or any of its assemblies) unless all solid-state heat sinks are correctly installed.
8. Always connect an instrument's ground lead to the instrument chassis ground before connecting the positive lead ; always remove the instrument's ground lead last.

1-3 Precautions for Electrostatically Sensitive Devices (ESDs)

1. Some semiconductor (solid state) devices are easily damaged by static electricity. Such components are called Electrostatically Sensitive Devices (ESDs); examples include integrated circuits and some field-effect transistors. The following techniques will reduce the occurrence of component damage caused by static electricity.
2. Immediately before handling any semiconductor components or assemblies, drain the electrostatic charge from your body by touching a known earth ground. Alternatively, wear a discharging wrist-strap device. (Be sure to remove it prior to applying power - this is an electric shock precaution.)
3. After removing an ESD-equipped assembly, place it on a conductive surface such as aluminum foil to prevent accumulation of electrostatic charge.
4. Do not use freon-propelled chemicals. These can generate electrical charges that damage ESDs.
5. Use only a grounded-tip soldering iron when soldering or unsoldering ESDs.
6. Use only an anti-static solder removal device. Many solder removal devices are not rated as anti-static; these can accumulate sufficient electrical charge to damage ESDs.
7. Do not remove a replacement ESD from its protective package until you are ready to install it. Most replacement ESDs are packaged with leads that are electrically shorted together by conductive foam, aluminum foil or other conductive materials.
8. Immediately before removing the protective material from the leads of a replacement ESD, touch the protective material to the chassis or circuit assembly into which the device will be installed.
9. Minimize body motions when handling unpackaged replacement ESDs. Motions such as brushing clothes together, or lifting a foot from a carpeted floor can generate enough static electricity to damage an ESD.

Contents

Introduction	9
Using This Manual	9
Using Flowcharts.....	9
Basic Features and Functions	10
Display	11
Receipt Printer.....	12
Journal Printer.....	13
Control Lock	14
Keyboards.....	15
Initial Clear.....	16
Operations	17
Function Key Descriptions	17
Clerk Sign-On/Sign-Off	22
Direct Sign-On	22
Coded Sign-On.....	23
Receipt On and Off.....	23
PLU Registrations.....	24
NLU (Keyboard PLU) Entries	24
Numeric PLU Entries	27
Modifier Entries	29
Percentage Key (%) Registrations	30
Void and Correction Operations.....	33
Error Correct	33
Previous Item Void.....	34
Merchandise Return	35
VOID Control Lock Position (Transaction Void).....	36
Cancel.....	37
Subtotal Operations	38
Subtotal.....	38
Add Check (Tray Subtotal)	38
Eat-In/Take-Out/Drive Thru Operations	39
Tax Shift Operations.....	40
Tendering Operations	42
Cash.....	42
Check.....	42
Charge	43
Split Tender	44
Post Tendering.....	44
Receipt on Request	45
Training Mode	45
Clerk Interrupt	45
Non-Add Number	46

No Sale.....	46
Received on Account.....	47
Paid Out.....	47
Table Service Restaurant Operations.....	48
Overview.....	48
Posting Guest Checks Manually with the Previous Balance Key.....	50
Soft Check.....	51
Hard Check.....	54
Fast Food Drive Thru.....	57
Promo Function.....	58
Waste Function.....	58
Charge Posting Operations.....	59
Currency Conversion.....	62
Food Stamp Operations.....	63
Scale Operations.....	64
Direct Scale Entry.....	64
Manual Weight Entry.....	64
Scale With Automatic Tare Entry.....	65
Scale With Manual Tare Entry.....	65
Integrated Payment Operations.....	65

Management Functions 67

Introduction.....	67
Cash Declaration.....	68
System Reports.....	70
Running a Report – General Instructions.....	70
Report Table.....	71

S-Mode Programming 73

Overview.....	73
Clearing Memory.....	74
Memory All Clear.....	74
Clear All Totals and Counters.....	74
Clear Grand Total.....	75
Clear PLU File.....	75
Self Tests.....	75
EPROM Information.....	76
Memory Allocation.....	77
Memory Expansion.....	77
Memory Calculation Worksheet.....	77
Memory Allocation Program.....	78
Memory Allocation Program Scan.....	79
Function Key Assignment Programming.....	80
Function Key Codes.....	81
ER-5215M Keyboard Expansion.....	82
RS-232 Communication Option Programs.....	83
RS-232 Option Chart.....	83
Updating Firmware Program.....	85
Update Files.....	85
PC Connection Cable.....	85
Update Boot Area.....	86
Update Program Area.....	86

P-Mode Programming

88

Default Program	88
Tax Programming	89
Straight Percentage Tax Rate Programming	90
Tax Table Programming.....	91
PLU Programming.....	93
Program 100 - PLU Status Programming.....	94
Program 110 - PLU Auto Tare Programming	97
Program 150 - PLU Group Assignment.....	98
Program 200 - PLU Price/HALO Programming	99
Program 250 - PLU Stock Amount Programming	100
Program 300 - PLU Descriptor Programming.....	101
Program 350 - PLU Link Programming.....	103
Program 400 - PLU Delete Programming	104
Program 450 - PLU Mix and Match Programming	105
System Option Programming.....	106
System Option Table.....	107
System Options - Reference Information	110
Print Option Programming	112
Print Option Table.....	113
Function Key Programming	118
Program 70 - Function Key Options	118
Program 80 - Function Key Descriptor	119
Program 90 - Function Key HALO.....	120
Instructions for Currency Conversion Rate - Program 90.....	121
ADD CHECK - Function Key Options	122
CANCEL - Function Key Options	122
CASH - Function Key Options	123
CHARGE 1-8 - Function Key Options	124
CHECK - Function Key Options.....	125
CHECK CASHING - Function Key Options.....	126
CHECK ENDORSEMENT - Function Key Options.....	126
CHECK # - Function Key Options.....	127
DRIVE THRU / EAT IN / TAKE OUT - Function Key Options	128
ERROR CORRECT - Function Key Options.....	129
F/S Subtotal - Function Key Options	129
F F/S TEND - Function Key Options.....	130
GUEST - Function Key Options	130
#/NS - Function Key Options.....	131
MDSE RETURN - Function Key Options	131
MODIFIER 1-5 - Function Key Options	132
PBAL - Function Key Options.....	132
PROMO - Function Key Options.....	133
PAID OUT 1-3 - Function Key Options	133
PRINT CHECK - Function Key Options	134
RECD ON ACCT 1-3 - Function Key Options.....	134
SCALE - Function Key Options	135
SERVICE - Function Key Options	136
SUBTOTAL - Function Key Options	136
TARE - Function Key Options.....	137
TAX EXEMPT - Function Key Options.....	138
TIP - Function Key Options	139
VALIDATE - Function Key Options.....	139
VOID - Function Key Options.....	140

WASTE - Function Key Options	140
%1-%5 Function Key Options.....	141
Mix and Match Discount Programming	142
Program 600 – Trip Level Programming.....	142
Program 601 – Price Programming	143
Program 610 – Mix & Match Descriptor Programming.....	143
Clerk Programming.....	144
Program 800 - Secret Code Programming.....	144
Program 801 - Drawer Assignment.....	145
Program 810 - Clerk Descriptor Programming	145
Group Programming	146
Miscellaneous Programming	148
Program 1500 - Macro Key Sequence Programming.....	148
Program 700 - Logo/Endorsement Message Programming.....	149
Program 701 - Financial Report Descriptor Programming.....	150
Program 710 - Clerk Report Descriptor Programming.....	152
Program 711 - Macro Name Programming	154
Program 720 – DataTran Message Program.....	155
Program 1000 - NLU Code Number Programming	156
Program 1100 - Cash-In-Drawer Limit Programming	157
Program 1200 - Check Change Limit Programming.....	157
Program 1300 - Date and Time Programming	158
Program 1400 - Scale Tare Weight Programming	159
Program 1600 - Machine Number Programming	160
Program Scans	160

Sample Reports 162

Financial	162
Time.....	166
PLU.....	167
Clerk	168
Individual Clerk.....	169
Groups	170
Stock.....	171
Open Check	172
Balancing Formulas	173

Integrated Payment Appendix 175

One Day Example of Credit Authorization	175
Open Batch.....	175
Sample Transaction	176
Manual Card Entry	177
Merchandise Return.....	177
Void Transaction	178
Local Total Report.....	178
Tip (Gratuity) Entry.....	178
Close Batch.....	179
Reset Mode Procedures	180
DataTran Function Table.....	180
Initialize EFT.....	180
Clear Curr Batch.....	180
Chg Batch Number	181
Issue Local Total	181

Issue Transaction.....	182
Issue Batch Status.....	182
Dial In Load/Dial Out Load	183
Required ECR Programs.....	183
Local Transaction Report Key	183

Index	187
--------------	------------

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/samsung/ER-5215M operating programming ma](https://the-checkout-tech.com/manuals/samsung/ER-5215M%20operating%20programming%20manual.pdf)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)