

SERVICE MANUAL



ELECTRONIC CASH REGISTER

ECR550



SPECIFICATIONS

| Model number | ECR-550-4 | ECR-550-6 | ECR-550-8 |
|-----------------------|---|---|----------------------------|
| Number of department | 4 | 6 | 8 |
| Number of totals | 69 | 73 | 77 |
| Number of clerks | 4 clerk totals with counter using a push switch. (CL1, CL2, CL3, CL4) | | |
| Memory | CMOS RAM (Holding time of memory: 1000 hrs) | | |
| Battery | Rechargeable NiCd battery for memory protection | | |
| Printer | Digital line printer for Electronic Cash Register 10 digits for receipt, 10 digits for journal, Auto start-stop system | | |
| Indication | Green fluorescent multi digits display tubes 2 digits for department & symbol, 7 digits for amount | | |
| Input capacity | Amount ≤ 7 digits Entry-limited digits for department by program | Multiplication Quantity ≤ 4 digits, Unit price & Result ≤ 7 digits Split pricing Quantity sold & Quantity priced ≤ 4 digits, Unit price & Result ≤ 7 digits (including $\frac{1}{2}$) | (including $\frac{1}{2}$) |
| Total capacity | Amount ≤ 8 digits (including $\frac{1}{2}$), Quantity & counter ≤ 4 digits | | |
| Paper roll | 45 (H) (W) \times 80 (D) mm (R-4073888) | | |
| Ink roll | R-S17613 | | |
| Locking mechanism | Mode key switch, Journal protection key, Drawer lock key | | |
| Operation temperature | 0 $^{\circ}$ ~40 $^{\circ}$ C (32 $^{\circ}$ ~104 $^{\circ}$ F) | | |
| Power supply | AC Local Voltage $\pm 10\%$, 50/60Hz | | |
| Power consumption | Stand by 15W, MAX35W | | |
| Dimensions | 396 (W) \times 426 (D) \times 324 (H) mm | | |
| Weight | 14 kg | | |
| Optional accessories | Compulsory drawer, Water-proof keyboard cover | | |

CONTENTS

| | |
|--|-------|
| 1. OPENING THE UNIT | 1 |
| 2. HOW TO PROGRAM | 2~5 |
| 3. BLOCK DIAGRAM | 5 |
| 4. CABLE CONNECTION | 6 |
| 5. WIRING DIAGRAM FOR MODE LOCK SW. | 6 |
| 6. DEVICE SPECIFICATIONS | 7~8 |
| 7. TROUBLE SHOOTING | 9~10 |
| 8. HOW TO CLEAR THE NON-RESETTABLE TOTAL & Z-COUNTER ... | 11 |
| 9. MACHINE INITIALIZE | 11 |
| 10. DESCRIPTION OF MAIN CONTROLLER | 11~16 |
| 11. DESCRIPTION OF MODE & OPTIONAL SELECTION | 17~18 |
| 12. DESCRIPTION OF PRINTER CONTROLLER | 19~22 |
| 13. MAINTENANCE & PEPAIR OF PRINTER | 22~27 |
| 14. DESCRIPTION OF POWER SUPPLY | 27~29 |
| 15. PRINTER PARTS LIST | 30 |
| 16. PRINTER EXPLODED VIEW | 31~33 |
| 17. EXPLODED VIEW(CABINET & CHASSIS) | 34 |
| 18. PARTS LIST(CABINET, CHASSIS, DRAWER, OPTION) | 35~37 |
| 19. EXPLODED VIEW(DRAWER) | 38 |

WIRING AND SCHEMATIC DIAGRAMS AT END OF MANUAL

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Sanyo/ECR-550 Service including programming](https://the-checkout-tech.com/manuals/Sanyo/ECR-550%20Service%20including%20programming)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)