

SHARP

SERVICE MANUAL



ER-1072
MODEL ER-1073
ELECTRONIC CASH REGISTER
(PRINTER: MODEL-355)

CONTENTS

1. SPECIFICATIONS	2
1-1. Keyboard	3
1-2. Display	4
1-3. Printer	4
1-4. Print Formats	6
1-5. Error Processing	9
2. MANUAL RESET AND INITIAL SETTING (SRV MODE)	9
2-1. Program	9
2-2. All-Memories Clear	9
2-3. Initial Setting	9
2-4. Z Counter Setting	11
2-5. Checking of Preset	11
3. INITIAL SETTING (PGM MODE)	11
3-1. Setting Item	11
3-2. Checking of Preset	12
4. DATE SETTING (DATE MODE)	12
5. READ(X) AND RESET(Z) REPORT	12
6. POWER FAILURE MARK (*****No)	12
7. CIRCUIT BLOCK DIAGRAM	13
8. CIRCUIT DESCRIPTION	14
8-1. LI3072 Terminal Signals	14
8-2. SW1 and SW2	15
8-3. ACL Signal	15
8-4. PE Signal	15
8-5. DC Source Output	16
9. CAUTIONS ON SERVICING	16
10. FITTING PROCEDURE OF REAR DISPLAY TUBE	18

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/sharp/ER-1072> and [ER-1073](https://the-checkout-tech.com/manuals/sharp/ER-1073) service guide manu

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)