



SHARP

SERVICE MANUAL

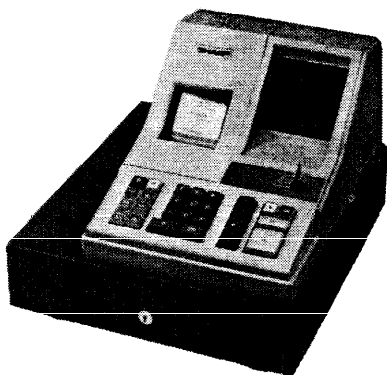

ER-1074

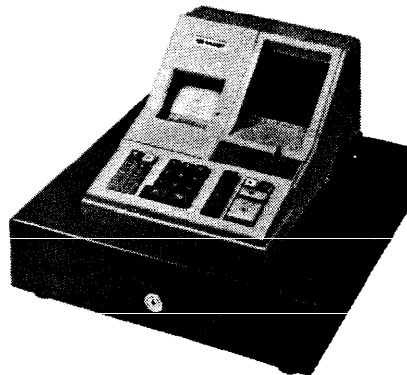

ER-1075

**ELECTRONIC CASH REGISTER
(PRINTER: MODEL-355)**

CONTENTS

1. SPECIFICATIONS	2
1-1. Keyboard	3
1-2. Display	4
1-3. Printer	4
1-4. Clock functions	5
1-5. Printing formats	6
2. MANUAL RESET AND INITIAL SETTING (SRV MODE)	10
2-1. Program reset	10
2-2. All-Memories clear	10
2-3. Initial setting	10
2-4. GT memory initial value (Total 12 digits)	12
2-5. Z counter initial value (Total 4 digits)	13
2-6. Preset contents reading	13
3. PROGRAM SETTING (PGM MODE)	13
3-1. Preset items	13
3-2. Preset contents reading	14
4. DATE AND TIME SETTING (DATE MODE)	14
4-1. Preset items	14
4-2. Reading of date setting	14
4-3. Reading of alarm set time	14
5. CIRCUIT DESCRIPTIONS	15
5-1. LI3076 terminal signals	15
6. KEY P.W.B. LAYOUT	18
7. MAIN P.W.B. LAYOUT	19
8. MAIN CIRCUIT DIAGRAM	20
9. PARTS GUIDE	

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/sharp/ER-1074> and [ER-1075 service manual.htm](https://the-checkout-tech.com/manuals/sharp/ER-1075)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)