

Sharp ER-1076 operating Manual

SHARP®

SHARP ELECTRONIC CASH REGISTER
SHARP ELEKTRONISCHE REGISTRIERKASSE
CAISSE ENREGISTREUSE ELECTRONIQUE DE SHARP
CAJA REGISTRADORA ELECTRONICA DE SHARP

MODEL
MODELL
MODELE
MODELO

ER-1076

INSTRUCTION MANUAL
BEDIENUNGSANLEITUNG

MANUEL D'INSTRUCTIONS
MANUAL DE INSTRUCCIONES



CONTENTS

	Page
Method of Installation	3
Physical Characteristics of the ER-1076 Register	4
Installing the Paper Roll and Mounting the Take-up Spool	5
Keyboard Layout and Duties of Switch and Keys	7
1. Duty of mode switch (serves also as power switch)	7
2. Keyboard and key functions	8
Description of the Display	9
Programming	10
1. Machine-number programming (a maximum of 3 digits)	10
2. Consecutive-number programming (a maximum of 4 digits)	10
3. Programming for the department and minus keys	10
4. Programming for the [%] key	11
5. Programming for time print Yes/No and print format selection	11
6. Programming an entry digit limit for the check key	11
7. Date setting	12
8. Time setting	12
9. Reading the contents of programming	12
Various Registrations	13
1. Single-item registration	13
2. Registration of single-item cash sale	13
3. Multiple-item registration	13
4. Repetitive registration	13
5. Multiplication registration	14
6. Minus registration	14
7. Discount and premium registrations	14
8. Amount-tendered registration	15
9. Credit registration	15
10. Received-on-account registration (a maximum of 7 digits)	16
11. Paid-out registration (a maximum of 7 digits)	16
12. Exchange	16
Correction	17
1. Correction of entered numbers	17
2. Correction right after registration (direct void)	17
3. Correction of the next-to-last or earlier registrations (indirect void)	17
4. Cancellation after the issuance of a receipt (after the finish of a transaction) [in the [☒] mode]	17

 
	Page
Reading and Resetting of Sales	18
In Case of Power Failure	19
Locking the Drawer	20
Removing the Drawer	20
Opening the Drawer by Hand	21
Replacing the Paper Roll and Removing the Paper Take-up Spool	22
Replacing the Ink Ribbon	23
Ink Refill	24
Guidance to Options	25
Specifications	26

METHOD OF INSTALLATION

When using the ER-1076 in those regions that require it to be equipped with a drawer with 4 slots for bill and 8 slots for coin denominations, it is necessary to fix the ER-1076 on a table.

Hereunder is described the method of fixing the ER-1076 on a table by use of supplied fixtures.

- (1) Choose a flat table.
- (2) Lay down the machine so that its left side faces downward. (Lay soft cloth under the machine to prevent its cabinet from being hurt.)
- (3) With the cushion area of fixtures directed to the machine bottom, fix them in two holes at the left side (looking from the front) so that the drawer bottom plate can be inserted in U-shaped grooves of the fixtures. These fixtures must be fitted in the same direction.

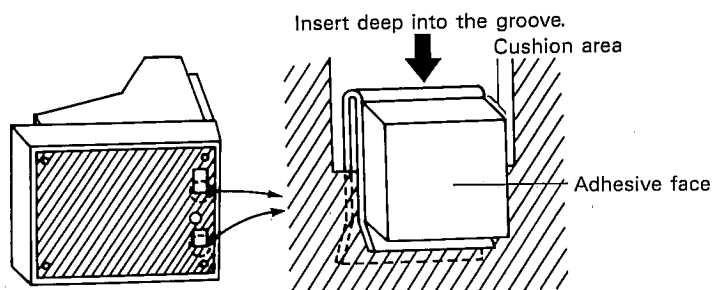

- (4) Peel off protective seal from the cushion area. The adhesive area reveals itself. Don't lay table cloth on the table because the adhesive area directly contacts it. Also clean the surface of the table.
- (5) Stand the machine, and slightly press it down to fix the adhesive face of each fixture firmly on the table.
- (6) Now, the machine is fixed tight on the table. In case you want to remove the machine to another place, move it to the left looking from the front to detach it from the table. A fixture loses its adhesive properties if once used. If you need fixtures, purchase from your dealer.

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/sharp/ER-1076 operating manual.html](https://the-checkout-tech.com/manuals/sharp/ER-1076%20operating%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)