

Sharp ER-1076 operating Manual

# SHARP®

SHARP ELECTRONIC CASH REGISTER  
SHARP ELEKTRONISCHE REGISTRIERKASSE  
CAISSE ENREGISTREUSE ELECTRONIQUE DE SHARP  
CAJA REGISTRADORA ELECTRONICA DE SHARP

MODEL  
MODELL  
MODELE  
MODELO

# ER-1076

INSTRUCTION MANUAL  
BEDIENUNGSANLEITUNG

MANUEL D'INSTRUCTIONS  
MANUAL DE INSTRUCCIONES



# CONTENTS

	Page
<b>Method of Installation</b> .....	3
<b>Physical Characteristics of the ER-1076 Register</b> .....	4
<b>Installing the Paper Roll and Mounting the Take-up Spool</b> .....	5
<b>Keyboard Layout and Duties of Switch and Keys</b> .....	7
1. Duty of mode switch (serves also as power switch) .....	7
2. Keyboard and key functions .....	8
<b>Description of the Display</b> .....	9
<b>Programming</b> .....	10
1. Machine-number programming (a maximum of 3 digits) .....	10
2. Consecutive-number programming (a maximum of 4 digits) .....	10
3. Programming for the department and minus keys .....	10
4. Programming for the [%] key .....	11
5. Programming for time print Yes/No and print format selection .....	11
6. Programming an entry digit limit for the check key .....	11
7. Date setting .....	12
8. Time setting .....	12
9. Reading the contents of programming .....	12
<b>Various Registrations</b> .....	13
1. Single-item registration .....	13
2. Registration of single-item cash sale .....	13
3. Multiple-item registration .....	13
4. Repetitive registration .....	13
5. Multiplication registration .....	14
6. Minus registration .....	14
7. Discount and premium registrations .....	14
8. Amount-tendered registration .....	15
9. Credit registration .....	15
10. Received-on-account registration (a maximum of 7 digits) .....	16
11. Paid-out registration (a maximum of 7 digits) .....	16
12. Exchange .....	16
<b>Correction</b> .....	17
1. Correction of entered numbers .....	17
2. Correction right after registration (direct void) .....	17
3. Correction of the next-to-last or earlier registrations (indirect void) .....	17
4. Cancellation after the issuance of a receipt (after the finish of a transaction) [in the [☒] mode] .....	17

 
	Page
Reading and Resetting of Sales .....	18
In Case of Power Failure .....	19
Locking the Drawer .....	20
Removing the Drawer .....	20
Opening the Drawer by Hand .....	21
Replacing the Paper Roll and Removing the Paper Take-up Spool .....	22
Replacing the Ink Ribbon .....	23
Ink Refill .....	24
Guidance to Options .....	25
Specifications .....	26

## METHOD OF INSTALLATION

When using the ER-1076 in those regions that require it to be equipped with a drawer with 4 slots for bill and 8 slots for coin denominations, it is necessary to fix the ER-1076 on a table.

Hereunder is described the method of fixing the ER-1076 on a table by use of supplied fixtures.

- (1) Choose a flat table.
- (2) Lay down the machine so that its left side faces downward. (Lay soft cloth under the machine to prevent its cabinet from being hurt.)
- (3) With the cushion area of fixtures directed to the machine bottom, fix them in two holes at the left side (looking from the front) so that the drawer bottom plate can be inserted in U-shaped grooves of the fixtures. These fixtures must be fitted in the same direction.

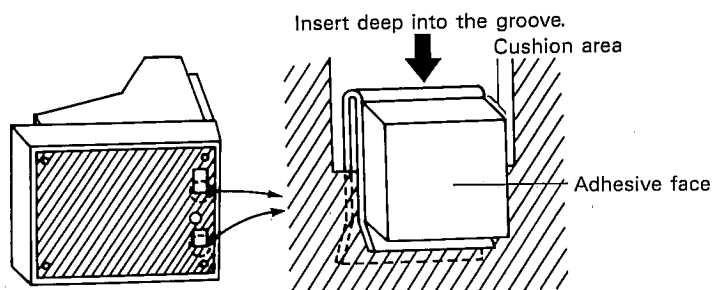

- (4) Peel off protective seal from the cushion area. The adhesive area reveals itself. Don't lay table cloth on the table because the adhesive area directly contacts it. Also clean the surface of the table.
- (5) Stand the machine, and slightly press it down to fix the adhesive face of each fixture firmly on the table.
- (6) Now, the machine is fixed tight on the table. In case you want to remove the machine to another place, move it to the left looking from the front to detach it from the table. A fixture loses its adhesive properties if once used. If you need fixtures, purchase from your dealer.

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)