

# SHARP

# SERVICE MANUAL



## MODEL ER-1772

ELECTRONIC CASH REGISTER

( PRINTER: MODEL-355 )  
( MODE KEY NO.: GZ25 )

### CONTENTS

1. REFERENCE DOCUMENTS .....	2
2. OUTLINE OF FUNCTIONS .....	2
3. SPECIFICATIONS .....	3
3-1. Rating .....	3
3-2. Keyboard .....	3
3-3. Display .....	4
3-4. Printer .....	5
3-5. Print Formats .....	7
3-6. Error Processing .....	9
3-7. Drawer/Lock .....	9
3-8. Protection From Power Failure .....	10
3-9. Memories .....	11
4. OPTIONS .....	11
5. SERVICE (SRV) MODE .....	12
5-1. Program Reset .....	12
5-2. Master Reset* (All memories clear) .....	12
5-3. Setting Item (SRV1 mode) .....	12
5-4. Preset Reading (SRV1 mode) .....	14
6. PROGRAM (PGM) MODE .....	14
6-1. Preset .....	14
6-2. Preset Reading .....	15
7. DATE MODE .....	16
8. READING, RESETTING .....	16
8-1. Reading (X mode) .....	16
8-2. Resetting (Z mode) .....	16
9. CAUTIONS ON SERVICING .....	17
10. CIRCUIT BLOCK DIAGRAM .....	18
11. CIRCUIT DESCRIPTIONS .....	19
11-1. LI3073 Terminal Signal .....	19
11-2. Keyboard Control .....	19
11-3. Display Control .....	19
11-4. RAM Control (256 x 4 bits) .....	20
11-5. Printer Control (M-355) .....	20
11-6. Printer Power Supply and Brake Circuit .....	20
11-7. Power Supply Circuit .....	20
11-8. ACL Signal .....	20
11-9. Drawer Control .....	21
12. FITTING PROCEDURE OF REAR DISPLAY TUBE .....	22
13. DEPARTMENT EXPANSION (2 to 4 DEPT.) .....	22
14. CHANGE OF NUMERIC KEY TOPS FOR U.K. ONLY .....	23
15. CIRCUIT DIAGRAM AND PWB LAYOUT .....	23
16. PARTS GUIDE .....	

SHARP CORPORATION

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)