


SHARP

SERVICE MANUAL

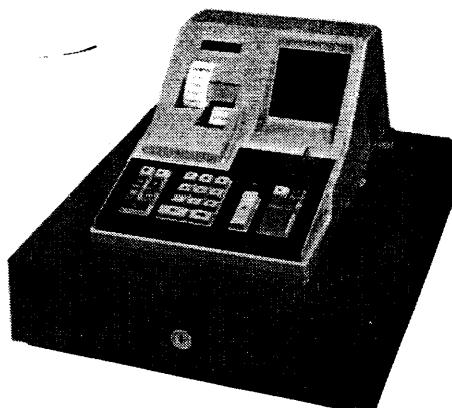

MODEL ER-1872

ELECTRONIC CASH REGISTER (PRINTER: SE-6106)

CONTENTS

1. SPECIFICATIONS	2
1-1. Keyboard	3
1-2. Display	4
1-3. Printer	5
1-4. Print Formats	6
1-5. Error Processing	9
2. MANUAL RESET AND INITIAL SETTING (SRV MODE)	9
2-1. Program Reset	9
2-2. All-memories Clear	9
2-3. Setting Items	9
2-4. Z Counter Setting	11
3. INITIAL SETTING (PGM MODE)	12
3-1. Setting Items	12
3-2. Checking of Preset	12
4. DATE SETTING	12
5. READ(X) AND RESET (Z) REPORT	12
6. POWER FAILURE MARK (★★★★★)	12
7. CIRCUIT BLOCK DIAGRAM	13
8. CIRCUIT DESCRIPTIONS	14
8-1. LI3071 Terminal Signals	14
8-2. SW1 and SW2	15
8-3. ACL Signal	15
8-4. PE Signal	15
8-5. DC Source Output	16
9. CAUTIONS ON SERVICING	15
10. REGARDING DRAWER OPEN-CLOSE DETECTOR	17

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/sharp/ER-1872 service manual.html](https://the-checkout-tech.com/manuals/sharp/ER-1872%20service%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)