



MODEL ER-1873

ELECTRONIC CASH REGISTER

Printer : SE-6304

Service Key Code : LKGiM1004CCZZ

(No mode key No.)

CONTENTS

1. REFERENS DOCUMENTS	1
2. OPTIONS	2
3. OUTLINE OF FUNCTIONS	3
4. SPECIFICATIONS	3
5. SERVICE (SRV) MODE	12
6. PROGRAM (PGM) MODE	19
7. DATE MODE	21
8. READING (X) & RESETING (Z) MODE	21
9. PRECAUTIONS ON SERVICING	22
10. CIRCUIT BLOCK DIAGRAM – 1	25
11. CIRCUIT BLOCK DIAGRAM – 2	26
12. μ PD766-115 TERMINAL SIGNALS	28
13. μ PD7507-015 TERMINAL SIGNALS	30
14. EXPANSION OF DEPARTMENT	32
15. CIRCUIT DIAGRAMS AND P.W.B. LAYOUT	
16. PARTS GUIDE	

SHARP CORPORATION

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/sharp/ER-1873 parts guide manual.html](https://the-checkout-tech.com/manuals/sharp/ER-1873%20parts%20guide%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)