


SHARP

SHARP ELECTRONIC CASH REGISTER
SHARP ELEKTRONISCHE KELLNERKASSE
CAISSE ENREGISTREUSE ELECTRONIQUE DE SHARP
CAJA REGISTRADORA ELECTRONICA DE SHARP

MODEL **ER-1873**

INSTRUCTION MANUAL
BEDIENUNGSANLEITUNG

MANUEL D'INSTRUCTIONS
MANUAL DE INSTRUCCIONES

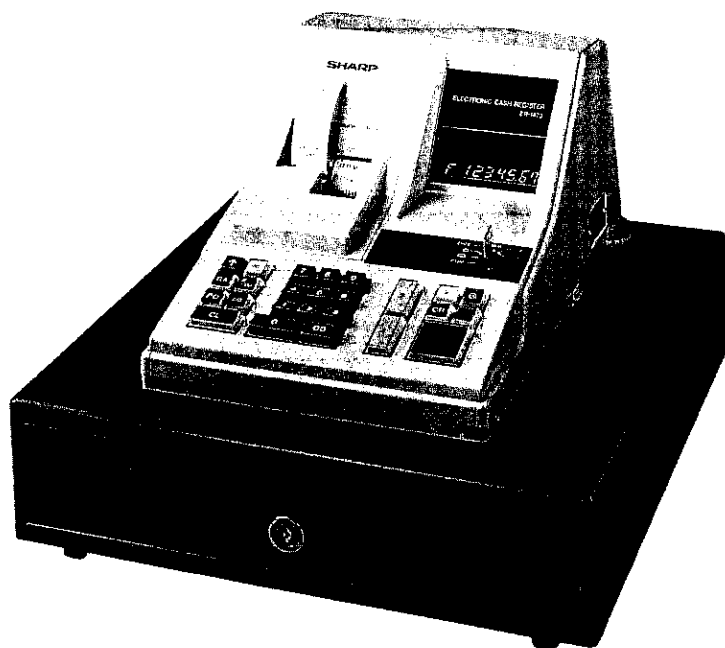

CAUTION:

For a complete electrical disconnection pull out the mains plug.

VORSICHT:

Zur vollständigen elektrischen Trennung vom Netz, den Netzstecker ziehen.

ATTENTION:

Pour obtenir une totale déconnection, débrancher la prise de courant secteur.

AVISO:

Para una desconexión eléctrica completa, desenchufar el enchufe de tomacorriente.

WARNING:

För att helt koppla från strömmen, dra ut stickproppen.

INTRODUCTION

Thank you very much for your purchase of the SHARP Electronic Cash Register, Model ER-1873.

Please read this Manual carefully before operating your machine in order to gain a full understanding of its function and performance.

Please keep this Manual for future reference, it will help you, if you encounter any operational problems.

IMPORTANT

- **Install your ER-1873 in a location that is not subject to direct radiation, unusual temperature changes, high humidity or exposed to water sources.**
Installation in such locations could cause damage to the cabinet and the electrical components.
- **The register should not be operated by an individual with wet hands.**
The water could seep into the interior of the ER-1873 and cause component failure.
- **When cleaning your register, use a dry, soft cloth. Never use volatile liquid, such as benzine and thinner.**
The use of such chemicals will lead to discoloration or deterioration of the cabinet.
- **The ER-1873 register plugs into any standard wall outlet (local voltage $\pm 10\%$ AC).**
Other electrical devices on the same electrical circuit could cause the ER-1873 to malfunction.
- **If the register malfunctions call your local dealer for service — Do not try to repair the register yourself.**

PRECAUTION

This Electronic Cash Register has a built-in memory protection circuit which is operated by rechargeable batteries.


As you know, all batteries will, in time, dissipate their charge even if not used.

Therefore to insure an adequate initial charge in the protection circuit, and to prevent any possible loss of memory upon installation, it is recommended that each unit be allowed to recharge for a period of 24 to 48 hours prior to use by the customer.

In order to charge the batteries, the machine must be plugged in and left on in the "REGISTER MODE". This recharging precaution can prevent unnecessary initial service calls.

CONTENTS

| | Page |
|--|-------|
| Physical Characteristics of the ER-1873 Register | 4~5 |
| Installing Paper Roll and Mounting the Take-up Spool | 6~7 |
| Keyboard Layout and Duties of Switch and Keys | 8~10 |
| 1. Duty of the mode switch (serves also as power switch) | 8 |
| 2. Keyboard and key functions | 9 |
| 3. Duties of the paper roll release levers and receipt ON-OFF switch (in the printer section) | 10 |
| Description of the Display | 11 |
| Decimal Point Position and the Way to Use the $\frac{1}{2}$ Penny Key | 12 |
| Programming | 13~15 |
| 1. Machine-number setting (a maximum of 2 digits) | 13 |
| 2. Consecutive-number setting (a maximum of 4 digits) | 13 |
| 3. Setting for departments | 13~14 |
| 4. Setting percentage with premium sign “+” or discount sign “-” | 14 |
| 5. Setting for the \ominus key | 14~15 |
| 6. Setting the journal print form to “Detail printing” or “Total printing” | 15 |
| 7. Setting the time printing to “Yes” or “No” | 15 |
| 8. Reading the contents of presetting | 15 |
| Date and Time Setting | 16 |
| 1. Date setting | 16 |
| 2. Time setting | 16 |
| 3. Automatic updating of date | 16 |
| Various Registrations | 17~19 |
| 1. Single-item registration | 17 |
| 2. Multiple-item registration | 17 |
| 3. Repetitive registration | 17 |
| 4. Multiplication registration | 17 |
| 5. Deduction registration | 18 |
| 6. Discount and premium registrations | 18 |
| 7. Amount-tendered registration | 19 |
| 8. Credit sales registration | 19 |
| 9. Registration into minus departments | 19 |
| 10. Received-on-account registration (a maximum of 7 digits) | 19 |
| 11. Paid-out registration (a maximum of 7 digits) | 19 |
| 12. Exchange (no-sale) | 19 |

| | Page |
|--|-------|
| Correction | 20~21 |
| 1. Correction of entered numbers | 20 |
| 2. Correction right after registration (direct void) | 20 |
| 3. Correction of the next-to-last or earlier registration (indirect void within a receipt) | 20 |
| 4. Cancellation after the issuance of a receipt (after the finish of a transaction) [at the  mode] | 21 |
| Reading and Resetting of Sales | 21~22 |
| In Case of Power Failure | 23 |
| Locking the Drawer | 23 |
| Removing the Till and the Drawer | 24 |
| Opening the Drawer by Hand | 24 |
| Replacing the Paper Roll and Removing the Paper Take-up Spool | 25~26 |
| Replacing the Ink Ribbon | 27 |
| Ink Refill | 28 |
| Specifications | 29 |
| Guidance to Options | 30~31 |

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)