



## **MODEL ER-1873**

### **ELECTRONIC CASH REGISTER**

Printer : SE-6304  
Service Key Code : LKGiM1004CCZZ  
(No mode key No.)

#### **CONTENTS**

1. REFERENS DOCUMENTS .....	1
2. OPTIONS .....	2
3. OUTLINE OF FUNCTIONS .....	3
4. SPECIFICATIONS .....	3
5. SERVICE (SRV) MODE .....	12
6. PROGRAM (PGM) MODE .....	19
7. DATE MODE .....	21
8. READING (X) & RESETTING (Z) MODE .....	21
9. PRECAUTIONS ON SERVICING .....	22
10. CIRCUIT BLOCK DIAGRAM – 1 .....	25
11. CIRCUIT BLOCK DIAGRAM – 2 .....	26
12. $\mu$ PD766-115 TERMINAL SIGNALS .....	28
13. $\mu$ PD7507-015 TERMINAL SIGNALS .....	30
14. EXPANSION OF DEPARTMENT .....	32
15. CIRCUIT DIAGRAMS AND P.W.B. LAYOUT	
16. PARTS GUIDE	

**SHARP CORPORATION**

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)