

SHARP®

SHARP ELECTRONIC CASH REGISTER
SHARP ELEKTRONISCHE REGISTRIERKASSE
CAISSE ENREGISTREUSE ELECTRONIQUE DE SHARP
CAJA REGISTRADORA ELECTRONICA DE SHARP

MODEL
MODELL
MODELE
MODELO

ER-1911

INSTRUCTION MANUAL
BEDIENUNGSANLEITUNG

MANUEL D'INSTRUCTIONS
MANUAL DE INSTRUCCIONES



If undue force is applied to the drawer, the cash register will become unstable.

CAUTION:

The socket-outlet shall be installed near the equipment and shall be easily accessible.

VORSICHT:

Die Netzsteckdose muß nahe dem Gerät angebracht und leicht zugänglich sein.

ATTENTION:

La prise de courant murale devra être installée à proximité de l'équipement et devra être facilement accessible.

AVISO:

El tomacorriente debe estar instalado cerca del equipo y debe quedar bien accesible.

VARNING:

Det matande vägguttaget skall placeras nära apparaten och vara lätt åtkomligt.

This apparatus complies with the requirements of EN 55014, 02. 1987 and BS 800: 1988.

Dieses Gerät stimmt mit den Bedingungen der EN 55014, 02. 1987 überein.

Cet appareil répond aux spécifications de la EN 55014, 02. 1987.

Dit apparaat voldoet aan de vereiste EN 55014, 02. 1987.

Apparatet opfylder kravene i EN 55014, 02. 1987.

Questo apparecchio è stato prodotto in conformità alle EN 55014, 02. 1987.

Αυτή η συσκευή τηρεί τις προδιαγραφές της EN 55014, 02. 1987.

Este aparelho responde às especificações da EN 55014, 02. 1987.

Este aparato cumple las especificaciones de la EN 55014, 02. 1987.

CAUTION:

For a complete electrical disconnection pull out the mains plug.

VORSICHT:

Zur vollständigen elektrischen Trennung vom Netz, den Netzstecker ziehen.

ATTENTION:

Pour obtenir une mise hors-circuit totale, débrancher la prise de courant secteur.

AVISO:

Para una desconexión eléctrica completa, desenchufar el enchufe de tomacorriente.

VARNING:

För att helt koppla från strömmen, dra ut stickproppen.

INTRODUCTION

Thank you very much for your purchase of the SHARP Electronic Cash Register Model ER-1911. Please read this Manual carefully before operating your machine in order to gain a full understanding of its functions and performance. Please keep this Manual for future reference. It will help you if you encounter any operational problems.

IMPORTANT

- **Install your ER-1911 in a location that is not subject to direct radiation, unusual temperature changes, high humidity or exposed to water sources.**
Installation in such locations could cause damage to the cabinet and the electrical components.
- **The register should not be operated by an individual with wet hands.**
The water could seep into the interior of the ER-1911 and cause component failure.
- **When cleaning your register, use a dry, soft cloth. Never use volatile liquid, such as benzine and thinner.**
The use of such chemicals will lead to discoloration or deterioration of the cabinet.
- **The ER-1911 register plugs into any standard wall outlet (local voltage $\pm 10\%$ AC).**
Other electrical devices on the same electrical circuit could cause the ER-1911 to malfunction.
- **If the register malfunctions, call your local dealer for service - Do not try to repair the register yourself.**
- **For a complete electrical disconnection, pull out the mains plug.**
The power is not turned off even when the mode switch is turned to the "⏻" position.

PRECAUTION

This Electronic Cash Register has a built-in memory protection circuit which is operated by rechargeable batteries.

As you know, all batteries will, in time, dissipate their charge even if not used.

Therefore to insure an adequate initial charge in the protection circuit, and to prevent any possible loss of memory upon installation, it is recommended that each unit be allowed to recharge for a period of 24 to 48 hours prior to use by the customer.

In order to charge the batteries, the machine must be plugged in and its power switch must be set to the "ON" position. This recharging precaution can prevent unnecessary initial service calls.

CONTENTS

Page

• PHYSICAL CHARACTERISTICS OF THE ER-1911 REGISTER	4
• KEYBOARD LAYOUT AND SWITCH AND KEY DESCRIPTIONS	6
1. Keyboard layout	6
2. Mode switch and mode keys	7
3. Receipt ON-OFF switch	7
• DISPLAYS	8
1. Operator display	8
2. Customer display	8
• PROGRAMMING	9
1. Setting the date and time	9
(1) Setting the date (#250)	9
(2) Setting the time (#251)	10
2. Setting the register number (#252)	10
3. Setting the consecutive number (#253)	11
4. Programming for departments	11
(1) Programming of unit prices (#110)	11
(2) Functional programming (#210)	12
(3) Programming of sign and tax status (#211)	13
(4) Setting the limit amount (HALO) of entry for department (#212)	14
5. Programming for PLUs	15
(1) Definition of PLU codes and department assignment (#121)	15
(2) Programming of unit prices (#120)	16
(3) Programming of sign and tax status (#221)	17
6. Function parameter programming	19
(1) Programming for the VAT and % keys (#130)	19
(2) Assigning the plus or minus sign for the % key (#231)	19
(3) Setting the limit amount (HALO) of entry for the ⊖ , RA , and PO keys (#232)	20
7. Programming for the TL , CR , and CH keys	21
(1) Programming the functions of the finalization keys (#260)	21
(2) Setting the limit amount (HALO) on change for cheque (#261)	22
(3) Setting the limit amount (HALO) of entry for the CH and CR keys (#262)	23
8. Programming for optional feature selection (#256)	24
9. Reading stored programs	25
(1) Program details and procedures for their reading	25
(2) Sample printouts	26
• REGISTRATIONS	29
• Preparations for entries	29
• Error warning	29
1. Item entries	30
(1) Single item entries	30
(2) Repeat entries	32
(3) Multiplication entries	33
(4) Split-pricing entries	34
(5) Single item cash sale (SICS) entries	35

	Page
2. Display of subtotals	35
3. Finalization of transaction	36
(1) Cash or cheque tendering	36
(2) Cash plus cheque tendering	37
(3) Cash or cheque sale without a tender amount entry	37
(4) Credit sale	38
(5) Cash or cheque plus credit tendering	38
4. Computation of VAT (Value Added Tax)/tax	39
5. Percent calculations (premium or discount)	40
(1) Percent calculation for item entries	41
(2) Percent calculation for the subtotal	41
6. Deduction	41
(1) Deduction for item entries	41
(2) Deduction for the subtotal	42
7. Refund entries	42
8. No sale (exchange)	42
9. Printing of non-add code numbers	43
10. Received on account entries	43
11. Paid out entries	43
• CORRECTION	44
1. Correction of the last entry (direct void)	44
2. Correction of the next-to-last or earlier entries (indirect void)	44
3. Correction of the subtotal (subtotal void)	45
4. Handling of errors found after receipt issuance	46
• COPY RECEIPT PRINTING	47
• TIME DISPLAY AND AUTOMATIC UPDATING OF THE DATE	48
• CORRECTION AFTER FINALIZING A TRANSACTION (AFTER GENERATING A RECEIPT)	49
• READING (X) AND RESETTING (Z) OF SALES TOTALS	50
– SAMPLE REPORTS –	51
• IN CASE OF POWER FAILURE	56
• IN CASE OF PRINTER'S MOTOR LOCKING	56
• INSTALLING AND REMOVING THE PAPER ROLL	57
• REPLACING THE INK ROLLER	59
• INK REFILL	60
• REMOVING THE TILL AND THE DRAWER	61
• OPENING THE DRAWER BY HAND	61
• BEFORE CALLING FOR SERVICE	62
– Program resetting –	62
• LIST OF OPTIONS	63
• SPECIFICATIONS	64

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)