

# SHARP®

OPTIONS  
SONDERZUBEHÖRTEILE  
OPTIONS  
ADITAMENTOS OPTATIVOS

MODEL  
MODELL  
MODELE  
MODELO

# ER-3100

INSTALLATION MANUAL  
EINBAUANLEITUNG

MANUEL D'INSTALLATION  
MANUAL PARA LA INSTALACION

<b>ENGLISH</b> .....	<b>Page</b>	<b>1</b>
<b>DEUTSCH</b> .....	<b>Seite</b>	<b>59</b>
<b>FRANÇAIS</b> .....	<b>Page</b>	<b>119</b>
<b>ESPAÑOL</b> .....	<b>Página</b>	<b>181</b>

## CONTENTS

	<u>Page</u>
1. GENERAL .....	1
2. SUMMARY OF THE ER-3100 OPTIONS .....	2
3. BEFORE INSTALLING OPTIONS .....	4
4. PRINTING OUT THE SRV-MODE AND PGM-MODE PROGRAMS .....	6
5. REMOVING THE TOP CABINET AND MAIN DRAWER .....	10
5.1 Removing the top cabinet .....	10
5.2 Replacing the top cabinet .....	11
5.3 Removing the main drawer .....	11
5.4 Replacing the main drawer .....	12
6. RS-232C INTERFACE (ER-31RS2) .....	14
6.1 Outline .....	14
6.2 Installation procedure .....	15
6.3 Operational check .....	20
6.4 Programming .....	21
7. RAM MEMORY CHIP (ER-46PL1) .....	35
7.1 Outline .....	35
7.2 Installation procedure .....	35
7.3 Operational check .....	36
7.4 Programming .....	38

	<u>Page</u>
8. PRESETS LOADER .....	42
8.1 Outline .....	42
8.2 Installation procedure .....	42
8.3 Operational check .....	44
8.4 Programming .....	45
8.5 Data sending and receiving .....	46
8.6 Use of the ER-01FD 3.5-inch floppy disk unit .....	47
9. REMOTE DRAWER (ER-37DW3) .....	49
9.1 Outline .....	49
9.2 Installation procedure .....	49
9.3 Operational check .....	52
9.4 Modification of the PGM-mode program .....	53
10. MODE SWITCH (ER-31MD1/MD2/MD3/MD4/MD5) .....	54
10.1 Outline .....	54
10.2 Installation procedure .....	54
10.3 Operational check .....	57

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)