

SHARP SERVICE MANUAL

CODE : 00ZER31RS4SME

RS232C INTERFACE

MODEL **ER-31RS4** (OPTION FOR ER-3100)

CONTENTS

1. INTRODUCTION	1
2. TRANSMISSION PROTOCOL (FOR ER-3100/PC)	2
3. SIGNAL CONNECTION DIAGRAM	10
4. PROGRAMMING (SRV, PGM MODE)	11
5. TEST FUNCTION	13
6. CIRCUIT DESCRIPTION	14
7. RS232C CABLE WIRING CHARTS	16
8. CIRCUIT DIAGRAM AND PWB LAYOUT	17
9. PARTS GUIDE	19

SHARP CORPORATION

This document has been published to be used for after sales service only. The contents are subject to change without notice.

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)