

# SHARP SERVICE MANUAL

CODE: 00ZER3550VSME



## ELECTRONIC CASH REGISTER

## MODEL ER-3550

SRV Key : LKGIM7113RCZZ  
 PRINTER: M-820

**CAUTION**

EXTREME CAUTION MUST BE TAKEN WHEN SERVICING THIS MACHINE. EVEN THOUGH THE MODE SWITCH IS IN THE OFF POSITION, VOLTAGE IS STILL SUPPLIED TO THE ENTIRE MACHINE.  
 WHEN WORKING ON THIS MACHINE MAKE SURE THAT THE POWER CORD IS REMOVED FROM THE WALL OUTLET.

CONTENTS

1. Block Diagram .....	1
2. Special Service Tools .....	2
3. Reference Documents .....	3
4. Specifications .....	3
5. Options .....	11
6. Service (SRV) mode .....	13
7. Program (PGM2/PGM1) mode .....	24
8. OP X/Z, X1, Z1/X2/Z2 mode .....	35
9. Service Precautions .....	36
10. Down load Function .....	37
11. Test Function .....	40
12. Circuit Description .....	54
13. Installation of Service Options .....	76
14. Circuit Diagram and PWB Layout .....	81
PRESET LOADER (OPTION) MODEL ER-02FD	
Parts Guide	

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)