

SHARP

SERVICE MANUAL

ER-37MA MODEL ER-37SL

Inter Register Communication (Option for ER-3712/3732)

CONTENTS

1. OUTLINE	1
2. COMPONENT PARTS	3
3. BASIC SPECIFICATIONS	3
4. TRANSMISSION MODE	4
5. INITIATION OF TRANSMISSION	4
6. SLAVE UNIT STATUS MESSAGE PRINT & DISPLAY	4
7. MEMORY CLEAR	5
8. COMMAND SENDING TO SLAVE	6
9. PROGRAMMING FOR IRC (SRV & PGM MODE)	7
10. IRC TRANSMISSION	9
11. RELEASE OF SLAVE IN MACHINE LOCK UP STATE	11
12. SIMPLE TROUBLESHOOTING	12
13. TROUBLESHOOTING OF THE INTERFACE PWB	14
14. RAM MAP	16
15. CIRCUIT DIAGRAM	
16. PARTS LIST	

REFERENCE DOCUMENT

- INSTALLATION MANUAL FOR ER-37MA/37SL.
- INSTRUCTION MANUAL FOR ER-37MA/37SL.
- CABLE INSTALLATION MANUAL FOR I.R.C.
- CASH REGISTER BASIC MANUAL "CHAPTER 17".

SHARP CORPORATION

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/sharp/ER-3712> and [ER-3732](https://the-checkout-tech.com/manuals/sharp/ER-3732) service IRC manual

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)