

SERVICE MANUAL

MODEL ER-37MA2

INTER REGISTER COMMUNICATION

(Option for ER-3712/3732)

CONTENTS

1. REFERENCE DOCUMENTS	1
2. PREFACE	1
3. COMBINATION OF IRC MODELS AND SLIP PRINTER MODEL	2
4. SLIP PRINT SAMPLE	2
5. JOB TABLE FOR SLIP PRINT	3
6. MODIFICATION FROM ER-37MA1 TO ER-37MA2	4
7. ROM PARTS LIST	4
8. IRC CONTROL PWB LAYOUTS	5

[For the IRC MEMORY PWB LAYOUT, Please refer to
the ER-3712/3732 OPTION SERVICE MANUAL (ER-37MB).]

PRECAUTION FOR SLAVE MACHINE

The mode switch of the slave machine must be set to any other position than "OFF" or "SRV," during transmission by the IRC system. Transmission would not be done in a proper manner if the mode switch of the slave machine was set to "SRV" position. ----- This precaution is also applicable to the SLAVE machine of ER-37MA1.

SHARP CORPORATION

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/sharp/ER-37MA2 option service IRC manual.htm](https://the-checkout-tech.com/manuals/sharp/ER-37MA2_option_service_IRC_manual.htm)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)