

SHARP SERVICE MANUAL

CODE: 00ZER4100SMSE

ELECTRONIC CASH REGISTER

SECTION 1 PROGRAMMING

ER-4100

MODEL ER-4110



ER-4100



ER-4110

SRV Key: LKGIM7113RCZZ
 PRINTER: M-2662A
 OPTIONS: ER-41PI(SLIP I/F Board)
 ER-33MB(Memory board (32KB))
 ER-01RA(Memory chip (32KB))
 ER-31MD1 ~ 5(OPTIONAL Mode SW)
 ER-37DW3(OPTION Drawer)
 ER-67LC(LEVEL CONVERTER)
 ER-01FD, ER-02FD(3.5" FDD unit)
 ER-52CB(Loader cable)
 ER-41MA(INLINE MASTER)
 ER-41SL(INLINE SLAVE)
 ER-01RP(Kitchen printer)
 ER-52SP(SLIP PRINTER (M-545))

CONTENTS

★ ER-4100, ER-4110	
1. General	1
2. Reference documents	1
3. Specifications	1
4. Options	13
5. SRV/PGM program list	15
6. File control (SRV mode)	23
7. SRV (Service) mode	30
8. Down Load Function and file transmission	47
9. PGM1, PGM2 (Program) modes programming	56
10. OPX/Z, X1/Z1, X2/Z2 modes	70
11. Program Break error message	72
12. SSP (Special Service Preset)	72
★ ER-41MA/SL (In-line)	
1. ER-4100/4110 (In-line) system configuration	78
2. Hardware requirements	79
3. Transmission system specifications	79
4. File/data allocation in the ER-4100/4110 SRN (In-line) system	82
5. Program data updating	88
6. SRV mode programming	90
7. PGM2 mode programming	93
8. Communication function outline	95
9. Operations in the SRN systems	96
10. Reading (X) and Resetting (Z) reports	97
11. Software installation procedure for ER-4100/4110 in-line system	98
★ Service Optional Installing Installation procedure	99

SHARP CORPORATION

This document has been published to be used for after sales service only.
 The contents are subject to change without notice.

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)