


SHARP SERVICE MANUAL

CODE : 00ZER41RSSM-E

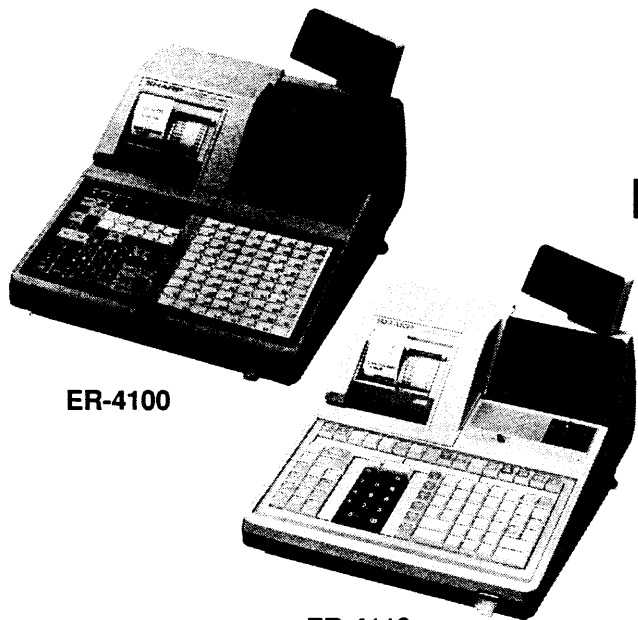

ER-4100

ER-4110

RS-232C INTERFACE KIT

MODEL ER-41RS

(OPTION FOR ER-4100 / 4110)

CONTENTS

1. GENERAL DESCRIPTION	1
2. COMPONENTS	1
3. SPECIFICATIONS OF RS-232C INTERFACE	2
4. SYSTEM CONFIGURATIONS	3
5. SIGNAL CONNECTION DIAGRAM	6
6. TRANSMISSION PROTOCOL (FOR ER-4100/4110-PC)	7
7. CONTROL SIGNAL SEQUENCE	14
8. DATA FORMAT	18
9. APPLICATION SPECIFICATION	19
10. KITCHEN PRINTER SYSTEM	32
11. WIDE PRINTER SYSTEM	34
12. TEST FUNCTION	36
13. CIRCUIT DESCRIPTION	40
14. RS-232C WIRING CHARTS	47
15. NOTE ABOUT D-SUB CONNECTOR COVER	49
16. CIRCUIT DIAGRAM AND PWB LAYOUT	50
PARTS GUIDE	

SHARP CORPORATION

This document has been published to be used for after sales service only. The contents are subject to change without notice.

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)