


SHARP SERVICE MANUAL

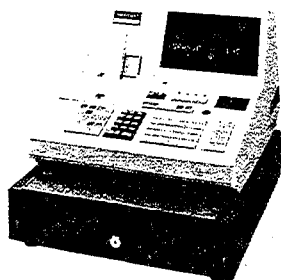

MODEL ER-4230

ELECTRONIC CASH REGISTER

PRINTER : Model-220F
 SRV KEY : LKGIM6861RCZZ
 (No Mode Key No.)

CAUTION

EXTREME CAUTION MUST BE TAKEN WHEN SERVICING THIS MACHINE. EVEN THOUGH THE MODE SWITCH IS IN THE OFF POSITION, VOLTAGE IS STILL SUPPLIED TO THE ENTIRE MACHINE. WHEN WORKING ON THIS MACHINE MAKE SURE THAT THE POWER CORD IS REMOVED FROM THE WALL OUTLET.

CONTENTS

1. Internal Block Diagram	1
2. Special Service Tools	2
3. Specifications	3
4. Option List	14
5. Outline of Functions	15
6. New functions (MGR mode)	16
7. Quick Reference to Program JOB Numbers Affecting Keys, Functions and Reports	21
8. SRV (service) Mode	24
9. Program Modes (PGM1, PGM2)	49
10. Reading and Resetting (CLK X/Z, X1/Z1, X2/Z2)	65
11. Precaution on Servicing	73
12. Test Functions	76
13. Circuit Block Diagram	82
14. Terminal Signals of μ PD7801G -096	83
15. Circuit Descriptions	85
16. Circuit Diagrams and P.W.B. Layouts	112
17. Parts Guide	

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/sharp/ER-4230 service manual.html](https://the-checkout-tech.com/manuals/sharp/ER-4230%20service%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)