

SHARP

- INSTALLATION MANUAL FOR ER-4550 OPTIONS
- MANUEL D'INSTALLATION POUR LES OPTIONS DE LA ER-4550

CONTENTS

	Page
● Precautions on the installation of every option	2
● Slip printer model ER-45SP2.	20
● Rear display model ER-45DP3.	24
● The key top and the CPU PWB.	26
1. Setting up a key unit	26
2. Taking the CPU PWB out of the PWB rack	26
3. Replacing the CPU PWB in the PWB rack	27
4. Illustration of mounting optional ROMs and RAMs	27
● Department Expansion kit model ER-45DT2	28
● Food stamp/Lay-away function unit model ER-45DT3	30
● Auto-void function unit model ER-45AV	32
● Cashier/clerk totalizer model ER-45TT	33
● PLU unit model ER-45PL1 and PLU expansion kit model ER-45PL2	34
● CLOCK unit model ER-27TM	39
● Drawers models ER-34DW, -34DW1, and -37DW1.	40

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)