

SHARP®

 
SHARP ELECTRONIC CASH REGISTER
SHARP ELEKTRONISCHE REGISTRIERKASSE
CAISSE ENREGISTREUSE ELECTRONIQUE DE SHARP
CAJA REGISTRADORA ELECTRONICA DE SHARP

MODEL
MODELL
MODELE
MODELO

ER-A150

INSTRUCTION MANUAL
BEDIENUNGSANLEITUNG

MANUEL D'INSTRUCTIONS
MANUAL DE INSTRUCCIONES

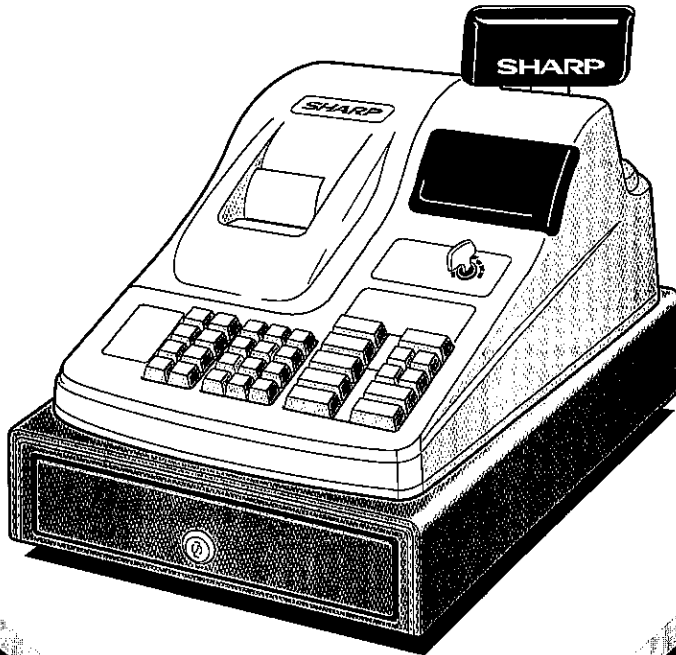

IMPORTANT!

 
 
Do the following before using the cash register.

1. Install Batteries

Batteries must be installed in the cash register to prevent the data and user-programmed settings from being erased from memory when the AC power cord is accidentally disconnected or in case of a power failure. **Please install the three AA batteries before proceeding with setup and use of this cash register.** Once installed, the batteries will last approximately one year before needing replacement. At this time, the "L" symbol will appear on the display to indicate that the batteries are low and must be replaced within two days. For replacing the batteries, see page 35.

Install batteries according to this procedure:

1. Remove the cash register from its carton and packing materials.
2. Pull the printer cover upward and detach it.
3. Open the battery cover next to the paper roll cradle.
4. Insert the three new AA batteries.
5. Close the battery cover.

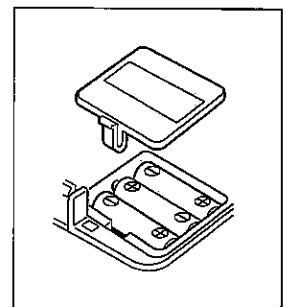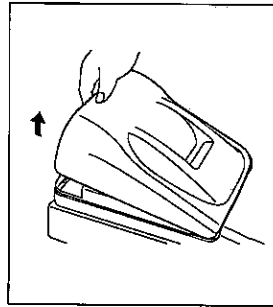

- Your cash register comes with a battery caution label. Please cut off the appropriate half and attach it to the battery cover.

 
 
6. Replace the printer cover.



- When inserting batteries place them so that the positive (+) and negative (-) ends face the proper direction as shown in the battery compartment.
- Do not mix battery types or brands.

2. Reset the Cash Register

In order for your cash register to operate properly, you must reset it before programming for the first time. Follow this procedure.

1. Insert the manager key (MA) and turn the mode switch to "PGM."
2. Insert the power plug while keeping  and  depressed simultaneously until the display shows "0.00".
 - The cash register is now reset and ready to be programmed.



- If you do this operation without installing batteries, a buzzer will sound three times.
- If you do this operation with a paper roll already installed, the printer prints "*****8".



- All the contents of memory are erased when the cash register is reset.

Table of Contents

HANDLING CAUTIONS	5
PARTS AND THEIR FUNCTIONS	5
Physical Characteristics.....	5
Mode Switch	6
Keys.....	6
Display	7
BEFORE OPERATION	8
OPERATION OVERVIEW	10
Things to Check Before Starting Work	10
Things You Can Do During Work	10
Things You Can Do After Work	10
BASIC SALE ENTRY PROCEDURE	11
Sale Entry and Change Calculation for a Typical Sale	11
OTHER TYPES OF ENTRIES AND USEFUL FEATURES	12
Entering or Repeat-Entering More Than One Item.....	12
Entering a Department.....	13
Entering a PLU (Price Lookup).....	13
Basic Entry of a Single-Item Cash Sale.....	13
More About Finalizing a Sale.....	13
Finalizing a Credit Sale.....	14
Finalizing a Sale Paid by Check	14
Finalizing a Mixed Tender Sale	14
Computation of VAT	15
Discounts Using the Minus Key.....	15
Discounts and Premiums Using the Percent Keys	16
Entering a Foreign Currency Sale	17
Entering a Refund.....	18
Entering and Printing a Non-Add Code Number.....	18
Received on Account and Paid-Out Entries	19
Opening the Drawer with No Sale	19
Receipt On-Off function	19
Displaying the Time	19
CORRECTIONS	20
Correction of Entered Numbers	20
Correction of the Last Entry (Direct Void)	20
Correction of the Next-To-Last or Earlier Entries (Indirect Void)	21
Correction After Issuance of Receipt.....	21
READING AND RESETTING OF SALES	22

PROGRAMMING	24
Programming VAT	24
Programming the Departments.....	24
Programming a Preset Unit Price	26
Programming Price Lookups (PLU).....	26
Programming the Minus Key	27
Programming the Percent Keys.....	27
Programming the Exchange Key	29
Programming an Entry Digit Limit for the [RA], [RCPT/PC], [CR] and [CH] Keys.....	29
Overriding the Entry Digit Limits	30
Programming the Machine Number.....	30
Programming the Receipt Start Number.....	30
Programming the Printing Format.....	31
Limiting the Number of Usable Functions.....	31
Checking the Machine Settings	32
DRAWER HANDLING	34
Removing the Drawer	34
Locking and Unlocking the Drawer	34
Manually Opening the Drawer	34
MAINTENANCE	35
Batteries.....	35
Replacement	35
Paper Roll	36
Installation	36
Removal	37
Ink Ribbon.....	38
Removal	38
Installation	38
IN CASE OF POWER FAILURE OR PAPER JAM	39
BEFORE CALLING FOR SERVICE	39
SPECIFICATIONS	40

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)