

SHARP SERVICE MANUAL




MODEL ER-A220

(For "V" version)

SRV Key: LKGIM7113RCZZ

PRINTER: LTP-1245

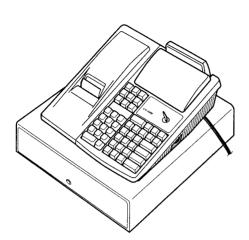

CAUTION

EXTREME CAUTION MUST BE TAKEN WHEN SERVICING THIS MACHINE. EVEN THOUGH THE MODE SWITCH IS IN THE OFF POSITION, VOLTAGE IS STILL SUPPLIED TO THE ENTIRE MACHINE.

WHEN WORKING ON THIS MACHINE MAKE SURE THAT THE POWER CORD IS RE-MOVED FROM THE WALL OUTLET.

CONTENTS

CHAPTER	1. SPECIFICATIONS	1 - 1
CHAPTER	2. OPTIONS	2 - 1
CHAPTER	3. SERVICE (SRV) MODE	3 - 1
CHAPTER	4. HARDWARE DESCRIPTION	4 - 1
CHAPTER	5. TEST FUNCTION	5 - 1
CHAPTER	6. DOWN LOAD FUNCTION	6 - 1
CHAPTER	7. SERVICE PRECAUTION	7 - 1
CHAPTER	8. IPL (Initial Program Loading) FUNCTION	3 - 1
CHAPTER	9. INSTALLATION OF OPTIONS	9 - 1
CHAPTER	10. CIRCUIT DIAGRAM & PWB LAYOUT10) - 1
PARTS GUIDE		

Parts marked with "\(\!\!\!\)" are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

This is a "Table of Contents preview" for quality assurance

The full manual can be purchased from our store:

https://the-checkout-tech.com/manuals/sharp/ER-A220 service manual.html

And our free Online Keysheet maker:

https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/

HTTPS://THE-CHECKOUT-TECH.COM