

SHARP®


ELECTRONIC CASH REGISTER
ELEKTRONISCHE REGISTRIERKASSE
CAISSE ENREGISTREUSE ELECTRONIQUE
CAJA REGISTRADORA ELECTRONICA

MODEL
MODELL
MODELE
MODELO

ER-A220

INSTRUCTION MANUAL
BEDIENUNGSANLEITUNG

MANUEL D'INSTRUCTIONS
MANUAL DE INSTRUCCIONES

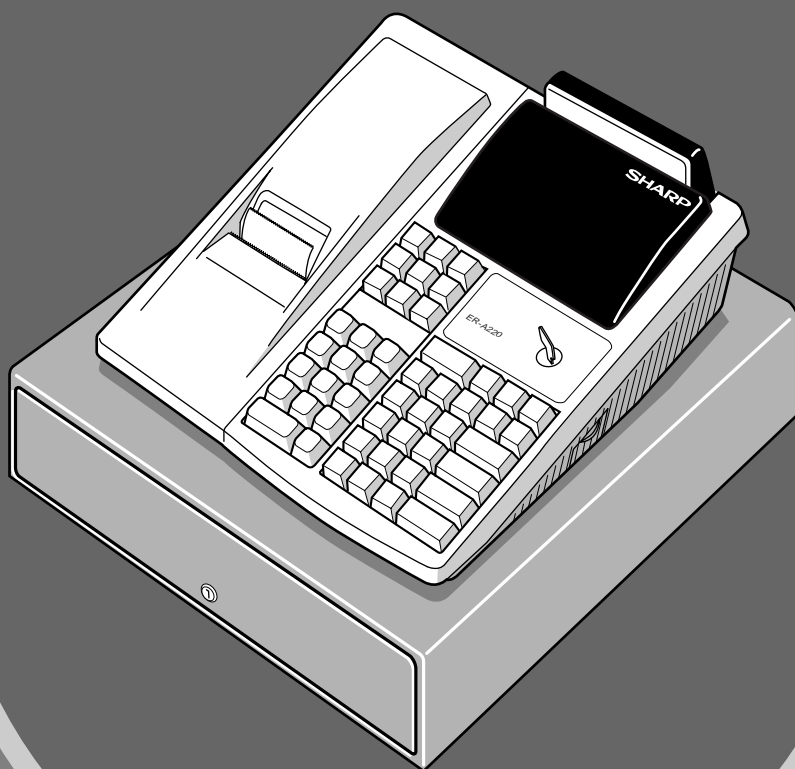

CAUTION:

The cash register and the remote drawer should be securely fitted to the supporting platforms to avoid instability when the drawers are open.

CAUTION:

The socket-outlet shall be installed near the equipment and shall be easily accessible.

VORSICHT:

Die Netzsteckdose muß nahe dem Gerät angebracht und leicht zugänglich sein.

ATTENTION:

La prise de courant murale devra être installée à proximité de l'équipement et devra être facilement accessible.

AVISO:

El tomacorriente debe estar instalado cerca del equipo y debe quedar bien accesible.

VARNING:

Det matande vägguttaget skall placeras nära apparaten och vara lätt åtkomligt.

CAUTION:

For a complete electrical disconnection pull out the mains plug.

VORSICHT:

Zur vollständigen elektrischen Trennung vom Netz den Netzstecker ziehen.

ATTENTION:

Pour obtenir une mise hors-circuit totale, débrancher la prise de courant secteur.

AVISO:

Para una desconexión eléctrica completa, desenchufar el enchufe de tomacorriente.

VARNING:

För att helt koppla från strömmen, dra ut stickproppen.

This equipment complies with the requirements of Directives 89/336/EEC and 73/23/EEC as amended by 93/68/EEC.

Dieses Gerät entspricht den Anforderungen der EG-Richtlinien 89/336/EWG und 73/23/EWG mit Änderung 93/68/EWG.

Ce matériel répond aux exigences contenues dans les directives 89/336/CEE et 73/23/CEE modifiées par la directive 93/68/CEE.

Dit apparaat voldoet aan de eisen van de richtlijnen 89/336/EEG en 73/23/EEG, gewijzigd door 93/68/EEG.

Dette udstyr overholder kravene i direktiv nr. 89/336/EEC og 73/23/EEC med tillæg nr. 93/68/EEC.

Quest' apparecchio è conforme ai requisiti delle direttive 89/336/EEC e 73/23/EEC, come emendata dalla direttiva 93/68/EEC.

Η εγκατάσταση αυτή ανταποκρίνεται στις απαιτήσεις των οδηγιών της Ευρωπαϊκής Ένωσης 89/336/ΕΟΚ και 73/23/ΕΟΚ, όπως οι κανονισμοί αυτοί συμπληρώθηκαν από την οδηγία 93/68/ΕΟΚ.

Este equipamento obedece às exigências das directivas 89/336/CEE e 73/23/CEE, na sua versão corrigida pela directiva 93/68/CEE.

Este aparato satisface las exigencias de las Directivas 89/336/CEE y 73/23/CEE, modificadas por medio de la 93/68/CEE.

Denna utrustning uppfyller kraven enligt riktlinjerna 89/336/EEC och 73/23/EEC så som komplette ras av 93/68/EEC.

Dette produktet oppfyller betingelsene i direktivene 89/336/EEC og 73/23/EEC i endringen 93/68/EEC.

Tämä laite täyttää direktiivien 89/336/EEC ja 73/23/EEC vaatimukset, joita on muutettu direktiivillä 93/68/EEC.

INTRODUCTION

Thank you very much for your purchase of the SHARP Electronic Cash Register, Model ER-A220. Please read this Manual carefully before operating your machine in order to gain full understanding of functions and features. Please keep this manual for future reference, it will help you, if you encounter any operational problems.

IMPORTANT

- **Install your register in a location that is not subject to direct radiation, unusual temperature changes, high humidity or exposed to water sources.**
Installation in such locations could cause damage to the cabinet and the electronic components.
- **The register should not be operated by an individual with wet hands.**
The water could seep into the interior of the register and cause component failure.
- **When cleaning your register, use a dry, soft cloth. Never use solvents, such as benzene and/or thinner.**
The use of such chemicals will lead to discoloration or deterioration of the cabinet.
- **The register plugs into any standard wall outlet (Official (nominal) voltage).**
Other electrical devices on the same electrical circuit could cause the register to malfunction.
- **If the register malfunctions, call your local dealer for service - do not try to repair the register yourself.**
- **For a complete electrical disconnection, pull out the mains plug.**

PRECAUTION

This Electronic Cash Register has a built-in memory protection circuit which is operated by rechargeable batteries.

As you know, all batteries will, in time, dissipate their charge even if not used. Therefore to insure an adequate initial charge in the protection circuit, and to prevent any possible loss of memory upon installation, it is recommended that each unit be allowed to recharge for a period of 24 to 48 hours prior to use by the customer.

In order to charge the batteries, the machine must be plugged in. This recharging precaution can prevent unnecessary initial service calls.

CONTENTS

INTRODUCTION	1
IMPORTANT	1
PRECAUTION	1
CONTENTS	2
EXTERNAL VIEW	4
PRINTER	4
KEYBOARD	5
KEYS AND SWITCHES	6
1 Mode switch and mode keys	6
2 Drawer lock key	6
DISPLAYS	7

FOR THE MANAGER

PROGRAMMING	8
1 Setting the date and time	8
2 Setting the register number and consecutive number	9
3 Programming the tax rate	9
4 Programming for departments	10
5 Price Lookup (PLU) programming	12
6 Programming for miscellaneous keys	13
Programming the rate (%, EX)	13
Programming the discount key amount (⊖)	14
Programming the percent rate limitation (⊖%)	14
Programming function parameters for ⊖ and % keys	14
Programming function parameters for EX key	15
Programming function parameters for TL, CH, CR, RA and PO keys	16
7 Text programming	16
How to program alphanumeric characters	16
Programming the department text	18
Programming the PLU text (item label)	18
Programming the function text	18
Programming the cashier names	20
Programming logo messages	20
Programming foreign currency symbol	21
Programming domestic currency symbol	21
8 Programming various functions	22
Programming optional feature selection	22
Programming print format	22
Programming receipt print format	23
Programming EURO system settings	24
Programming power saving mode	24
Programming logo message print format	25
Programming RS-232C interface	25
Programming thermal printer density	26
Language selection	27
Programming the AUTO key	27
9 Reading stored program	28
TRAINING MODE	29
READING (X) AND RESETTING (Z) OF SALES TOTALS	30
1 Summary of reading (X) and resetting (Z) reports	30
2 Daily sales totals	31
3 Periodic consolidation	33
CCD -Compulsory Cash/cheque Declaration	34

ELECTRONIC JOURNAL	35
PROGRAMMING FOR EURO	36
OVERRIDE ENTRIES	39
CORRECTION AFTER FINALIZING A TRANSACTION (AFTER GENERATING A RECEIPT)	39

FOR THE OPERATOR

PRIOR TO ENTRIES	40
1 Preparations for entries	40
2 Power saving mode	40
3 Error warning	41
ENTRIES	42
1 Item entries.....	42
Single item entries	42
Repeat entries	42
Multiplication entries	43
Single item cash sale (SICS) entry.....	43
2 Displaying subtotal	44
3 Finalization of transaction.....	44
Cash or cheque tendering	44
Cash or cheque sale that does not need any tender entry.....	45
Credit sale	45
Mixed-tender sale	45
4 Computation of VAT (Value Add Tax)/tax	45
5 Auxiliary entries	47
Percent calculations (premium or discount)	47
Deduction entries.....	47
Refund entries	48
Printing of non-add code numbers	48
6 Payment treatment.....	49
Currency exchange	49
Received on account entries	50
Paid out entries.....	50
No sale (exchange)	50
7 Automatic sequence key (AUTO) key) entries	50
8 Receipt issuance after finalization/Copy receipt.....	51
CORRECTION	52
1 Correction of the last entry (direct void)	52
2 Correction of the next-to-last or earlier entry (indirect void)	52
3 Subtotal void.....	53
4 Correction of incorrect entries not handled by the direct or indirect void function	53
OVERLAPPED CASHIER ENTRY	53
OPERATOR MAINTENANCE	54
1 In case of power failure	54
2 In case of printer error	54
3 Cautions in handling the printer and recording paper	54
4 Installing and removing the paper roll	55
5 Removing a paper jam	57
6 Cleaning the print head	57
7 Removing the till and the drawer	57
8 Opening the drawing by hand	58
9 Installing the fixing angle bracket	58
10 Before calling for service	59
LIST OF OPTIONS	60
SPECIFICATIONS	60

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)