
Sharp ER-A430 instruction Manual

SHARP

ELECTRONIC CASH REGISTER

MODEL ERALSO

INSTRUCTION MANUAL

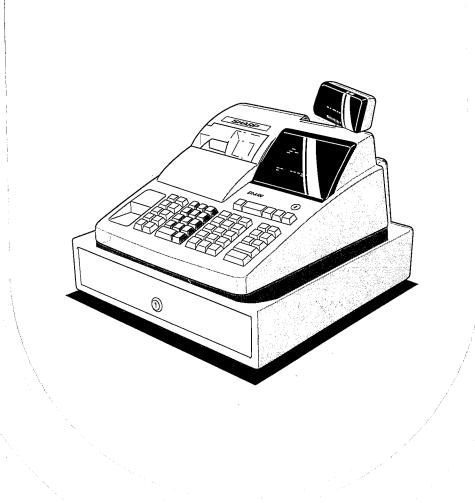

If undue force is applied to the drawer, the cash register will become unstable.

#### **CAUTION:**

The socket-outlet shall be installed near the equipment and shall be easily accessible.

#### VORSICHT:

Die Netzsteckdose muß nahe dem Gerät angebracht und leicht zugänglich sein.

### ATTENTION:

La prise de courant murale devra être installée à proximité de l'équipement et devra être facilement accessible.

#### AVISO:

El tomacorriente dede estar instalado cerca del equipo y debe quedar bien accesible.

#### **VARNING:**

Det matande vägguttaget skall placeras nära apparaten och vara lätt åtkomligt.

This apparatus complies with the requirements of BS 800 (EN 55014): 1988 and BS 6527 (EN 55022): 1988.

Dieses Gerät stimmt mit den Bedingungen der EN 55014, 02. 1987 und der EN 55022, 04. 1987 überein.

Cet appareil répond aux spécifications de la EN 55014, 02. 1987 et EN 55022, 04. 1987.

Dit apparaat voldoet aan de vereiste EN 55014, 02. 1987 en EN 55022, 04. 1987.

Apparatet opfylder kravene i EN 55014, 02. 1987 og EN 55022, 04. 1987.

Questo apparecchio è stato prodotto in conformità alle EN 55014, 02. 1987 e EN 55022, 04. 1987.

Αύτή η συσκευή τηρεῖ τίς προδιαγραφές τῆς ΕΝ 55014, 02. 1987 κατ ΕΝ 55022, 04. 1987.

Este aparelho responde às especificações da EN 55014, 02. 1987 e EN 55022, 04. 1987.

Este aparato cumple las especificaciones de la EN 55014, 02. 1987 y EN 55022, 04. 1987.

#### CAUTION:

For a complete electrical disconnection pull out the mains plug.

#### VORSICHT:

Zur vollständigen elektrischen Trennung vom Netz, den Netzstecker ziehen.

#### ATTENTION:

Pour obtenir une mise hors-circuit totale, débrancher la prise de courant secteur.

## AVISO:

Para una desconexión eléctrica completa, desenchufar el enchufe de tomacorriente.

## **VARNING:**

För att helt koppla från strömmen, dra ut stickproppen.

# INTRODUCTION

Thank you very much for your purchase of the SHARP Electronic Cash Register, Model ER-A430. Please read this Manual carefully before operating your machine in order to gain a full understanding of its functions and performance.

Please keep this Manual for future reference. It will help you, if you encounter any operational problems.

## IMPORTANT

- Install your ER-A430 in a location that is not subject to direct radiation, unusual temperature changes, high humidity or exposed to water sources.
  - Installation in such locations could cause damage to the cabinet and the electrical components.
- The register should not be operated by an individual with wet hands.
   The water could seep into the interior of the ER-A430 and cause component failure.
- When cleaning your register, use a dry, soft cloth. Never use volatile liquid, such as benzine and thinner.
  - The use of such chemicals will lead to discoloration or deterioration of the cabinet.
- The ER-A430 register plugs into any standard wall outlet (Official (nominal) voltage).
   Other electrical devices on the same electrical circuit could cause the ER-A430 to malfunction.
- If the register malfunctions, call your local dealer for service Do not try to repair the register yourself.

# **PRECAUTION**

This Electronic Cash Register has a built-in memory protection circuit which is operated by rechargeable batteries.

As you know, all batteries will, in time, dissipate their charge even if not used.

Therefore to insure an adequate initial charge in the protection circuit, and to prevent any possible loss of memory upon installation, it is recommended that each unit be allowed to recharge for a period of 24 to 48 hours prior to use by the customer.

In order to charge the batteries, the machine must be plugged in and left on in the "REG" (Registration) mode. This recharging precaution can prevent unnecessary initial service calls.

# CONTENTS

		Г	age
•	PHYSICAL CHARACTERISTICS OF THE ER-A430 REGISTER		. 5
•	KEYBOARD LAYOUT AND SWITCH AND KEY DESCRIPTIONS		. 7
	1. Keyboard		
	2. Mode switch and mode keys		. 8
•	DISPLAYS		10
	1. Operator display		10
	2. Customer display		11
•	GENERAL INSTRUCTIONS		12
	PROGRAMMING		13
	1. Setting the date and time		13
	(1) Setting the date (#2610)		
	(2) Setting the time (#2611)		
	2. Setting the register number (#2612)		
	3. Setting the consecutive number (#2613)		15
	4. Programming for departments		15
	(1) Programming of unit prices (#1110)		15
	(2) Functional programming (#2110)		
	(3) Programming of tax status (#2111)		
	(4) Setting a limit amount (HALO) of entry (#2112)		
	(5) Assigning departments to groups (#2116)		
	(6) Programming of department text (#2114)		
	ALPHANUMERIC CHARACTER CODE TABLE		
	5. Programming for PLUs		
	(1) Definition of PLU codes and department assignment (#1200)		
	(2) Programming of unit prices (#1210)		
	(3) Programming of base quantity (#1211)		
	(4) Programming of sign and tax status (#2211)		
	(5) Programming of PLU text (#2214)		
	6. Function parameter programming		
	(1) Programming of premium and discount rates and currency exchange rate (#1310)		
	(2) Programming of tax rate (#2711)		
	(3) Function programming for the finalization keys (#2320)		
	(4) Programming of sign (for %, ⊕) (#2311)		
	(5) Item % or subtotal % selection (#2315)		
	(6) Item $\bigcirc$ or subtotal $\bigcirc$ selection (#2316)		
	(7) Programming of HALO for percent calculation (#2313)		
	(8) Programming of HALO for deduction, received on account, and paid out (#2312)		
	(9) Programming of HALO for the finalization keys (#2322)		
	(10) Programming of HALO for cash in drawer, cheque change, and cheque cashing (#2321		
	(11) Programming of function text (#2314)		
	LIST OF FUNCTION TEXTS		
	7. Cashier programming		
	(1) Cashier code definition (#1500)		
	(2) Programming of the cashier name (#1514)		30

		Pa	ıge
	<ul> <li>(3) Programming drawer numbers for cashiers (#2510)</li> <li>8. Programming alarm length of time with drawer opening (#2617)</li> <li>9. Programming for optional feature selection (#2616)</li> <li>10. Programming the number of times of validation printing (#2615)</li> <li>11. Logo text programming (#2614)</li> <li>12. Selection of X1/Z1 and X2/Z2 reports to be printed in the stacked report sequence (#2620)</li> <li>13. Reading stored programs <ul> <li>(1) Program details and procedures for their reading</li> <li>(2) Sample printouts</li> </ul> </li> </ul>		37 38 40 41 43 44 44
•	* Preparations for entries  * Error warning  1. Cashier assignment  2. Item entries  (1) Single item entries (2) Repeat entries (3) Multiplication entries (4) Split-pricing entries (5) Single item cash sale (SICS)/single item finalize (SIF) entries  3. Display of subtotals  4. Finalization of transaction (1) Cash or cheque tendering (2) Mixed tendering (cheque + cash) (3) Cash or cheque sale that does not need a tender amount entry (4) Credit sale (5) Mixed-tender sale (cash or cheque tendering + credit sale)		49 49 50 51 52 53 54 55 55 56 56
	5. Computation of VAT (Value Added Tax)/tax 6. Auxiliary entries (1) Percent calculations (premium or discount) (2) Deduction (3) Refund entries (4) Printing of non-add code numbers 7. Payment treatment (1) Currency exchange (2) Received on account entries (3) Paid out entries (4) No sale (exchange) (5) Cashing a cheque		58 59 59 60 60 61 61 62
	CORRECTION  1. Correction of the last entry (direct void)  2. Correction of the next-to-last or earlier entries (indirect void)  3. Correction of the subtotal (subtotal void)  4. Handling of errors found after receipt issuance	!	63 63 64
•	SELECTION OF RECEIPT ISSUANCE	(	65
,	VARIOUS PRINTING	1	

	ŗ	Pa	ge
	2-1. Validation slip setting and printing	. '	67 67 68 68
•	OVERLAPPED CASHIER ENTRY		69
•	PRINTING OF THE EMPLOYEE ARRIVAL AND DEPARTURE TIMES		70
•	MANAGER MODE		70
•	CORRECTION AFTER FINALIZING A TRANSACTION (AFTER GENERATING A RECEIPT)		71
•	TIME DISPLAY AND AUTOMATIC UPDATING OF THE DATE		72
•	AUTOMATIC KEY FUNCTION		73
•	READING (X) AND RESETTING (Z) OF SALES TOTALS		74
	- SAMPLE REPORTS —		76
•	COMPULSORY CASH/CHEQUE DECLARATION		86
•	TRAINING MODE		88
•	OPERATOR MAINTENANCE  1. In case of power failure  2. In case of printer's motor locking  3. Paper roll near-end sensing function (only for journal paper) < option >  4. Installing and removing the paper roll  5. Installing the ink ribbon cassette  6. Ink refill  7. Removing the till and the drawer  8. Opening the drawer by hand		89 89 90 93 94 95
	9. Before calling for service		96
	— Program resetting —		
•			
•	SPECIFICATIONS	-	JO

This is a "Table of Contents preview" for quality assurance

The full manual can be purchased from our store:

https://the-checkout-tech.com/manuals/sharp/ER-A430 instruction manual.html

And our free Online Keysheet maker:

https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/

HTTPS://THE-CHECKOUT-TECH.COM