


# SHARP INSTALLATION MANUAL

CODE: 00ZERA510IMVE

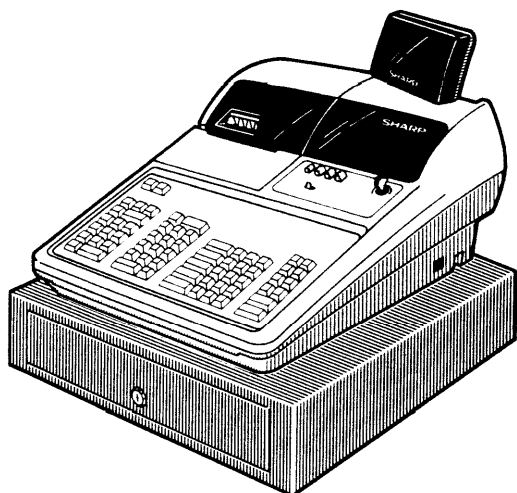

## ELECTRONIC CASH REGISTER

## MODEL ER-A510

SRV Key : LKGIM7113RCZZ  
PRINTER: M-820  
(For "V" version)

### CAUTION

EXTREME CAUTION MUST BE TAKEN WHEN SERVICING THIS MACHINE. EVEN THOUGH THE MODE SWITCH IS IN THE  $\odot$  POSITION, VOLTAGE IS STILL SUPPLIED TO THE ENTIRE MACHINE.  
WHEN WORKING ON THIS MACHINE MAKE SURE THAT THE POWER CORD IS REMOVED FROM THE WALL OUTLET.

### CONTENTS

CHAPTER 1. GENERAL .....	1
CHAPTER 2. LIST OF OPTIONS .....	1
CHAPTER 3. REMOVING THE TOP CABINET AND MAIN DRAWER .....	3
CHAPTER 4. REMOVING THE TOP CABINET .....	4
CHAPTER 5. EXPANSION RAM CHIP (ER-01RA, ER-02RA) .....	5
CHAPTER 6. CONTROL ROM (ER-A55R1) .....	7
CHAPTER 7. IN-LINE & RS232 I/F (ER-A5IN) RS232 I/F (ER-A5RS) .....	8
CHAPTER 8. REMOTE DRAWER (ER-02DW) .....	19
CHAPTER 9. SLIP PRINTER (ER-31SP) .....	21
CHAPTER 10. ONE HOLE CASHIER KEY (ER-A5CL) .....	26
CHAPTER 11. JOURNAL NEAR END SENSOR (DKIT-8643RCZZ) .....	27
CHAPTER 12. DRAWER FIXING KIT (DKIT-8633RCZZ) .....	28
CHAPTER 13. PRESETS LOADER .....	29

Parts marked with " $\triangle$ " is important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)