SHARP SERVICE MANUAL

CODE: 00ZERA57VOSME

ER-A570 OPTION

SRN (IN-LINE) INTERFACE

ER-A6IN

RS-232 INTERFACE

ER-A5RS

CONTROL ROM

MODEL ER-A57R1

(For "V" version)

CONTENTS
I. SRN (IN-LINE) SYSTEM FOR ER-A570
II. RS-232 SYSTEM FOR ER-A570
III. TEST FUNCTION FOR ER-A6IN AND ER-A5RS
IV. HARDWARE DESCRIPTION FOR ER-A6IN AND ER-A5RS 4-1
PARTS GUIDE

CONTENTS

Parts marked with "! " is important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

Precautions

1. Downloading the data from the ER-02FD in the inline system

To download the data from the ER-02FD onto the ECR in the inline system, the following procedure must be observed.

- 1) Download the data from the ER-02FD onto the ECR using the SRV #998.
- 2) Execute the SRV RESET operation.
- 3) Execute either the INLINE RAM CLEAR operation (#899) or the INLINE SET UP 1 JOB operation (#895).
- 4) Check the SRV #970 to see if the ECR memory capacity exceeds the packaged RAM memory capacity. If it does, add an optional RAM and follow the same procedure all over again from step 1).

I. SRN (IN-LINE) SYSTEM FOR ER-A570

ER-A6IN MODEL ER-A57R1 (For ER-A570)

(OPTIONS FOR ER-A570)

CONTENTS
CHAPTER 1. ER-A570 SRN (IN-LINE) SYSTEM CONFIGURATION 1-2
CHAPTER 2. HARDWARE REQUIREMENTS
CHAPTER 3. TRANSMISSION SYSTEM SPECIFICATIONS
CHAPTER 4. FILE/DATA ALLOCATION IN THE IN-LINE SYSTEM
CHAPTER 5. PROGRAM DATA UPDATING
CHAPTER 6. SRV-MODE PROGRAMMING
CHAPTER 7. PGM2 MODE PROGRAMMING
CHAPTER 8. TROUBLESHOOTING JOBS
CHAPTER 9. READING (X) AND RESETTING (Z) REPORTS 1-17
CHAPTER 10. SOFTWARE INSTALLATION PROCEDURE FOR IN-LINE SYSTEM

This is a "Table of Contents preview" for quality assurance

The full manual can be purchased from our store:

https://the-checkout-tech.com/manuals/sharp/ER-A570 service option Inline and RS232

And our free Online Keysheet maker:

https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/

HTTPS://THE-CHECKOUT-TECH.COM