


SHARP INSTALLATION MANUAL

CODE: 00ZERA570VIME

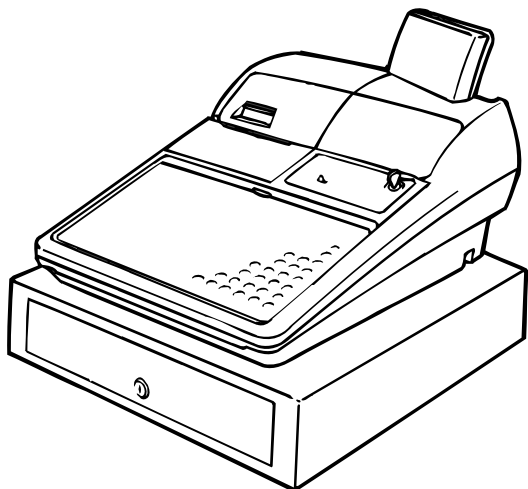

ELECTRONIC CASH REGISTER

MODEL ER-A570

SRV Key : LKGIM7113RCZZ
PRINTER: M-820
(For "V" version)

CAUTION

EXTREME CAUTION MUST BE TAKEN WHEN SERVICING THIS MACHINE. EVEN THOUGH THE MODE SWITCH IS IN THE & POSITION, VOLTAGE IS STILL SUPPLIED TO THE ENTIRE MACHINE.
WHEN WORKING ON THIS MACHINE MAKE SURE THAT THE POWER CORD IS REMOVED FROM THE WALL OUTLET.

CONTENTS

CHAPTER 1.	GENERAL.....	1
CHAPTER 2.	LIST OF OPTIONS.....	1
CHAPTER 3.	REMOVING THE MAIN DRAWER.....	2
CHAPTER 4.	REMOVING THE TOP CABINET.....	3
CHAPTER 5.	EXPANSION RAM CHIP and RAM BOARD (ER-01RA, ER-02RA, ER-01MB and ER-02MB).....	4
CHAPTER 6.	CONTROL ROM (ER-A61R1).....	7
CHAPTER 7.	IN-LINE I/F (ER-A6IN) and RS232 I/F (ER-A5RS).....	8
CHAPTER 8.	REMOTE DRAWER (ER-03DW).....	12
CHAPTER 9.	SLIP PRINTER (ER-31SP).....	14
CHAPTER 10.	ONE HOLE CLERK KEY (ER-A5CL).....	19
CHAPTER 11.	WMF CLERK KEY I/F (ER-A6WF).....	20
CHAPTER 12.	JOURNAL NEAR END SENSOR (DKIT-8643RCZZ).....	22
CHAPTER 13.	DRAWER FIXING KIT (DKIT-8633RCZZ).....	23
CHAPTER 14.	PRESETS LOADER.....	24

Parts marked with "!" is important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)