


# SHARP INSTALLATION MANUAL

CODE: 00ZERA750VIME

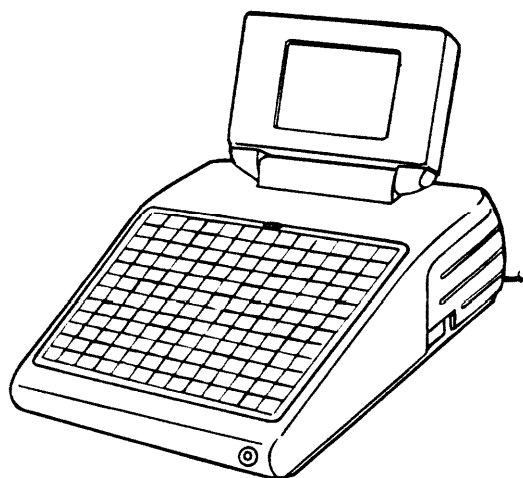

## POS TERMINAL

## MODEL ER-A750 (For "V" version)

### CONTENTS

1. Removing the rear cover .....	1
2. Replacing the rear cover .....	1
3. Removing the top cabinet .....	1
4. Replacing the top cabinet .....	1
5. Removing the rear display .....	2
6. Removing the Noise filter PWB, Transformer and AC cord .....	2
7. Replacing the Noise filter PWB and Transformer .....	2
8. Removing and replacing the keyboard unit .....	3
9. Removing and replacing the LCD unit (ER-A750) .....	3
10. ER-03MB & ER-04MB .....	4
11. Precautions in installing optional RAM PWBs .....	4
12. ER-A7RS .....	5
13. ER-A8MR .....	6
14. ER-03DW/04DW .....	6
15. Connecting the RS-232 connector and the SRN connector (Standard parts) .....	7
16. Cable wiring .....	7
17. RS-232 connecting device cable wiring diagram .....	8

Parts marked with "⚠" is important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)