


SHARP PROGRAMMING MANUAL

CODE: 00ZERA750VPME

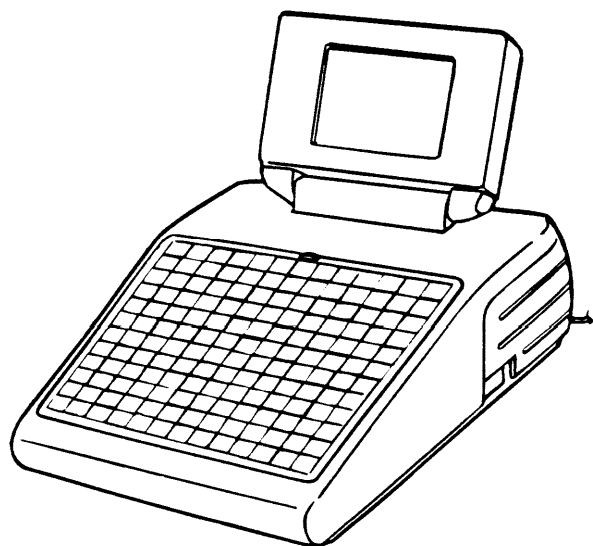

POS TERMINAL

MODEL ER-A750

(For "V" version)

CONTENTS

CHAPTER 1. SRV RESET (Program Loop Reset) and switch to SRV mode . . .	1
CHAPTER 2. MASTER RESET	2
CHAPTER 3. READING OF SRV MODE PROGRAM	4
CHAPTER 4. SRV MODE PROGRAMMING	15
CHAPTER 5. IRC SETTING	47

* For setting in PGM1 or PGM2 mode, refer to the Operation Manual.

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)