
## SHARP PROGRAMMING MANUAL

CODE : 00ZERA770VPM2

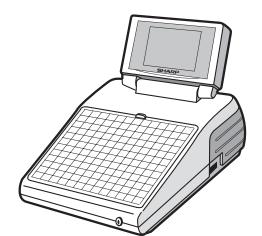

## **POS TERMINAL**

## MODEL ER-A770

(For "V2" version)

\*ROM Version\*

ROM No.	Version
ROM-1	VHI27801RAN1A
ROM-2	VHI27801RAO1A

CONTENTS	
CHAPTER 1. SRV RESET (Program Loop Reset) and switch to SRV mode2	
CHAPTER 2. MASTER RESET (All Memory Clear)	
CHAPTER 3. READING OF SRV MODE PROGRAM5	
CHAPTER 4. SRV MODE PROGRAMMING ("2 SETTING")11	
CHAPTER 5. IRC SETTING ("3 IRC SETTING")45	
CHAPTER 6. SRV MODE PROGRAMMING ("4 DOWN LOAD")48	
CHAPTER 7. SRV MODE PROGRAMMING ("5 DIAGNOSTICS")49	
CHAPTER 8. SRV MODE PROGRAMMING ("6 PRINTER")	
* For setting in PGM1 or PGM2 mode, refer to the Operation Manual.	

Parts marked with "A" are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

## SHARP CORPORATION

This document has been published to be used for after sales service only. The contents are subject to change without notice. This is a "Table of Contents preview" for quality assurance

The full manual can be purchased from our store: https://the-checkout-tech.com/manuals/sharp/ER-A770 programming V2 version manual

And our free Online Keysheet maker: https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/

HTTPS://THE-CHECKOUT-TECH.COM