


# SHARP PROGRAMMING MANUAL

CODE : 00ZERA770UPME

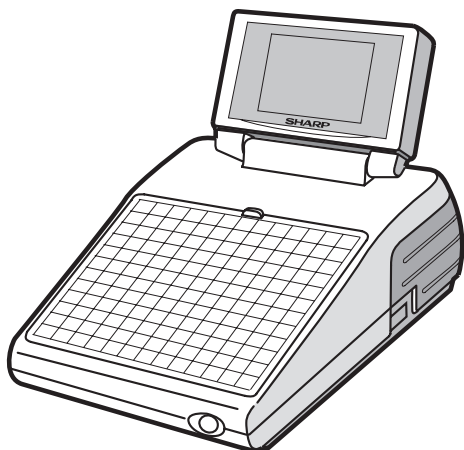

## POS TERMINAL

## MODEL ER-A770

(For "U"&amp;"A" version)

### CONTENTS

CHAPTER 1. SRV RESET (Program Loop Reset) and switch to SRV mode.....	2
CHAPTER 2. MASTER RESET (All Memory Clear) .....	3
CHAPTER 3. READING OF SRV MODE PROGRAM .....	6
CHAPTER 4. SRV MODE PROGRAMMING ("2 SETTING").....	12
CHAPTER 5. IRC SETTING ("3 IRC SETTING").....	39
CHAPTER 6. SRV MODE PROGRAMMING ("4 DOWN LOAD") .....	42
CHAPTER 7. SRV MODE PROGRAMMING ("5 DIAGNOSTICS").....	42

\* For setting in PGM1 or PGM2 mode, refer to the Operation Manual.

Parts marked with "△" are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/sharp/ER-A770 programming ver U and A manu](https://the-checkout-tech.com/manuals/sharp/ER-A770%20programming%20ver%20U%20and%20A%20manual.pdf)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)