


SHARP PROGRAMMING MANUAL

CODE : 00ZERA770VPM2

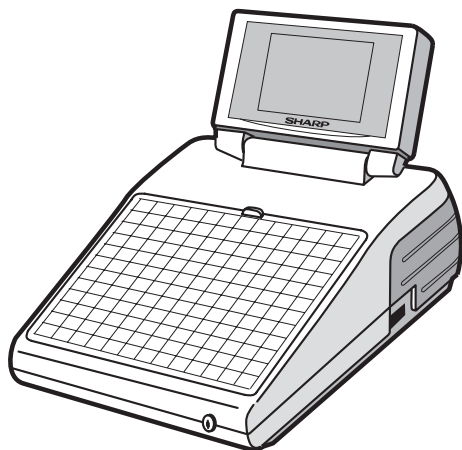

POS TERMINAL

MODEL ER-A770

(For "V2" version)

ROM Version

ROM No.	Version
ROM-1	VHI27801RAN1A
ROM-2	VHI27801RAO1A

CONTENTS

CHAPTER 1. SRV RESET (Program Loop Reset) and switch to SRV mode.....	2
CHAPTER 2. MASTER RESET (All Memory Clear)	3
CHAPTER 3. READING OF SRV MODE PROGRAM	5
CHAPTER 4. SRV MODE PROGRAMMING ("2 SETTING")	11
CHAPTER 5. IRC SETTING ("3 IRC SETTING")	45
CHAPTER 6. SRV MODE PROGRAMMING ("4 DOWN LOAD")	48
CHAPTER 7. SRV MODE PROGRAMMING ("5 DIAGNOSTICS").....	49
CHAPTER 8. SRV MODE PROGRAMMING ("6 PRINTER").....	49

* For setting in PGM1 or PGM2 mode, refer to the Operation Manual.

Parts marked with "△" are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)