


SHARP SERVICE MANUAL

CODE : 00ZERA770VSME

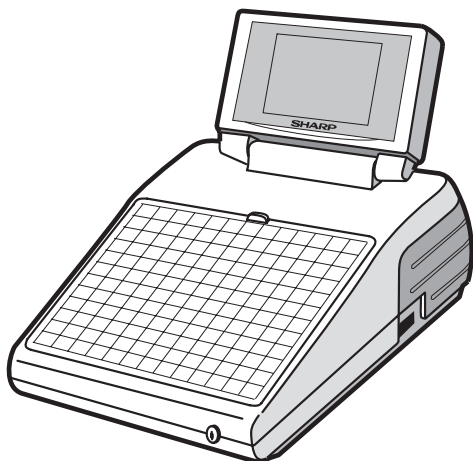

MODEL ER-A770

(For "V" version)

CONTENTS

CHAPTER 1. SPECIFICATIONS	1 - 1
CHAPTER 2. OPTIONS	2 - 1
CHAPTER 3. SERVICE PRECAUTION	3 - 1
CHAPTER 4. SRV RESET (Program Loop Reset) and switch to SRV mode ...	4 - 1
CHAPTER 5. MASTER RESET	5 - 1
CHAPTER 6. DIAGNOSTICS SPECIFICATIONS.....	6 - 1
CHAPTER 7. CIRCUIT DESCRIPTION	7 - 1
CHAPTER 8. CIRCUIT DIAGRAM	8 - 1
CHAPTER 9. PWB LAYOUT	9 - 1
PARTS GUIDE	

Parts marked with "⚠" are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)