


CODE : 00ZERA771VIME

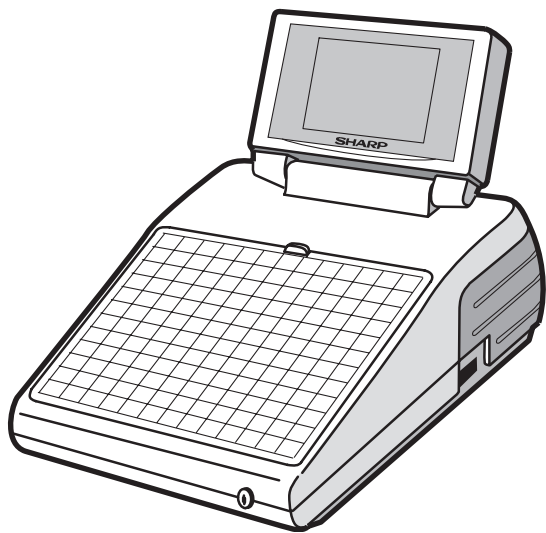

POS TERMINAL

MODEL ER-A771

(For "V" version)

CONTENTS

1. REMOVING THE REAR COVER	1
2. REPLACING THE REAR COVER	1
3. REMOVING THE TOP CABINET	1
4. REPLACING THE TOP CABINET	2
5. REMOVING THE NOISE FILTER PWB, TRANSFORMER AND AC CORD	2
6. REPLACING THE NOISE FILTER PWB AND TRANSFORMER .	2
7. REMOVING AND REPLACING THE KEYBOARD UNIT	2
8. REMOVING AND REPLACING THE LCD UNIT	3
9. EXPANSION RAM BOARD: UP-S02MB2	3
10. RS232 I/F: ER-A7RS2 & EFT I/F: ER-02EF2	3
11. MCR UNIT: UP-E12MR	4
12. DRAWER BOX UNIT: ER-03DW/04DW/05DW	4
13. CUSTOMER DISPLAY: UP-I16DP	4
14. REMOTE DISPLAY: UP-P16DP	5
15. HOW TO EXTEND DISPLAY POLE: UP-P16DP	6
16. TCP/IP I/F: STANDARD	7
17. RS232 I/F: STANDARD	7

Parts marked with "△" are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/sharp/ER-A771 installation manual.html](https://the-checkout-tech.com/manuals/sharp/ER-A771%20installation%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)