


SHARP PROGRAMMING MANUAL

CODE : 00ZERA771VPME

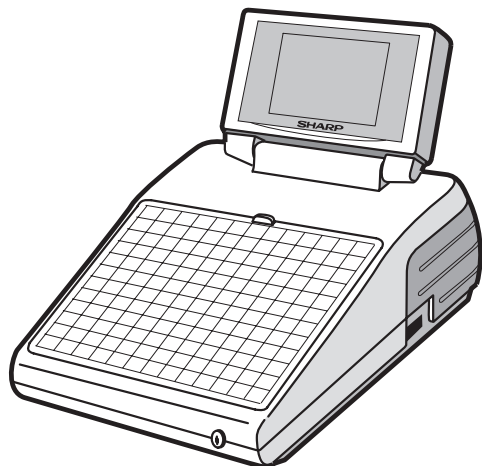

POS TERMINAL

MODEL ER-A771

(For "V" version)

CONTENTS

CHAPTER 1. SRV RESET (PROGRAM LOOP RESET) AND SWITCH TO SRV MODE	1 - 1
CHAPTER 2. MASTER RESET (ALL MEMORY CLEAR)	2 - 1
CHAPTER 3. READING OF SRV MODE PROGRAM	3 - 1
CHAPTER 4. SRV MODE PROGRAMMING ("2 SETTING")	4 - 1
CHAPTER 5. SRV MODE PROGRAMMING ("3 IRC SETTING")	5 - 1
CHAPTER 6. SRV MODE PROGRAMMING ("4 DOWN LOAD")	6 - 1
CHAPTER 7. SRV MODE PROGRAMMING ("5 DIAGNOSTICS")	7 - 1
CHAPTER 8. SRV MODE PROGRAMMING ("6 PRINTER")	8 - 1

Parts marked with "△" are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/sharp/ER-A771 programming manual.html](https://the-checkout-tech.com/manuals/sharp/ER-A771_programming_manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)