


# SHARP PROGRAMMING MANUAL

CODE : 00ZERA771VPME

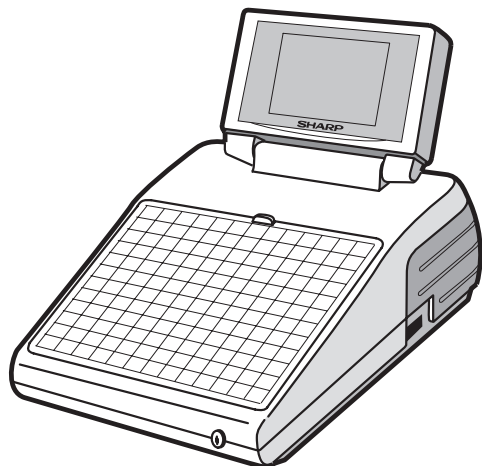

## POS TERMINAL

# MODEL ER-A771

(For "V" version)

### CONTENTS

CHAPTER 1. SRV RESET (PROGRAM LOOP RESET) AND SWITCH TO SRV MODE . . . . .	1 - 1
CHAPTER 2. MASTER RESET (ALL MEMORY CLEAR) . . . . .	2 - 1
CHAPTER 3. READING OF SRV MODE PROGRAM . . . . .	3 - 1
CHAPTER 4. SRV MODE PROGRAMMING ("2 SETTING") . . . . .	4 - 1
CHAPTER 5. SRV MODE PROGRAMMING ("3 IRC SETTING") . . . . .	5 - 1
CHAPTER 6. SRV MODE PROGRAMMING ("4 DOWN LOAD") . . . . .	6 - 1
CHAPTER 7. SRV MODE PROGRAMMING ("5 DIAGNOSTICS") . . . . .	7 - 1
CHAPTER 8. SRV MODE PROGRAMMING ("6 PRINTER") . . . . .	8 - 1

Parts marked with "△" are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)