


SHARP INSTALLATION MANUAL

CODE: 00ZUP3300VIME

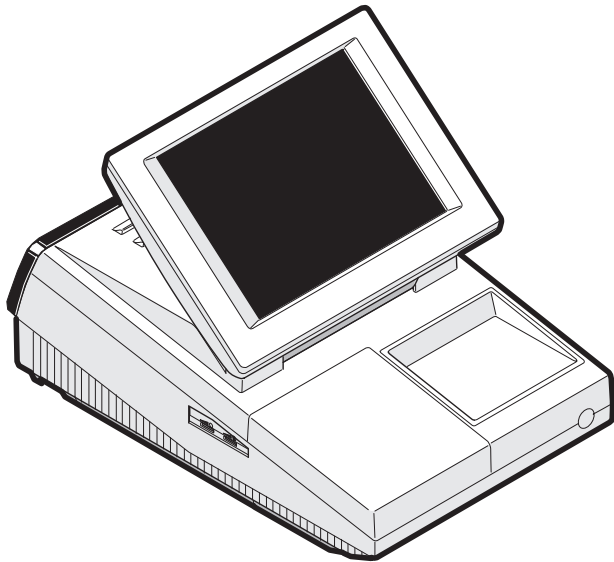

POS TERMINAL

MODEL UP-3300

("V" version)

CONTENTS

1. Removing the Rear display filter	2
2. Replacing the Rear display filter	2
3. Removing the Top cabinet	3
4. Replacing the Top cabinet	3
5. Removing the Power transformer, NF PWB and AC cord	3
6. Replacing the Power transformer, NF PWB and AC cord	3
7. Removing the LCD unit	4
8. Replacing the LCD unit	5
9. PS-RAM DISK : UP-P02MB2	5
10. RS232 I/F: ER-A7RS & EFT I/F ER-02EF	5
11. MCR UNIT: UP-E12MR2	6
12. DRAWER BOX UNIT: ER-03DW/04DW/05DW	6
13. REMOTE DISPLAY: UP-P16DP	6
14. HOW TO EXTEND DISPLAY POLE	6
15. BUILT-IN PRINTER: UP-T80BP	8
16. SRN I/F: STANDARD	12
17. RS232 I/F: STANDARD	12

Parts marked with "▲" is important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/sharp/UP-3300 installation manual.html](https://the-checkout-tech.com/manuals/sharp/UP-3300%20installation%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)