


SHARP INSTALLATION MANUAL

CODE: 00ZUP3300VIME

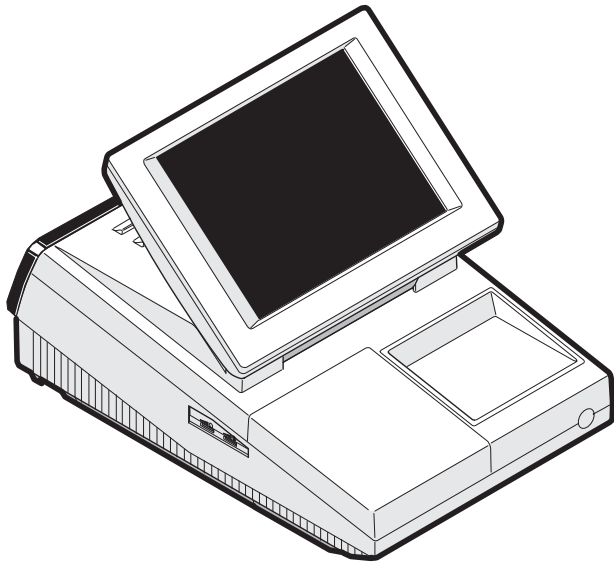

POS TERMINAL

MODEL UP-3300

("V" version)

CONTENTS

| | |
|--|----|
| 1. Removing the Rear display filter | 2 |
| 2. Replacing the Rear display filter | 2 |
| 3. Removing the Top cabinet | 3 |
| 4. Replacing the Top cabinet | 3 |
| 5. Removing the Power transformer, NF PWB and AC cord | 3 |
| 6. Replacing the Power transformer, NF PWB and AC cord | 3 |
| 7. Removing the LCD unit | 4 |
| 8. Replacing the LCD unit | 5 |
| 9. PS-RAM DISK : UP-P02MB2 | 5 |
| 10. RS232 I/F: ER-A7RS & EFT I/F ER-02EF | 5 |
| 11. MCR UNIT: UP-E12MR2 | 6 |
| 12. DRAWER BOX UNIT: ER-03DW/04DW/05DW | 6 |
| 13. REMOTE DISPLAY: UP-P16DP | 6 |
| 14. HOW TO EXTEND DISPLAY POLE | 6 |
| 15. BUILT-IN PRINTER: UP-T80BP | 8 |
| 16. SRN I/F: STANDARD | 12 |
| 17. RS232 I/F: STANDARD | 12 |

Parts marked with "▲" is important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)