


SHARP PROGRAMMING MANUAL

CODE: 00ZUP3300VPME

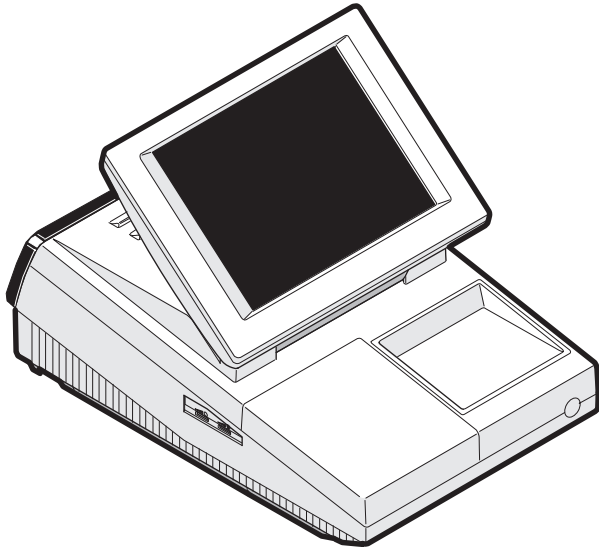

POS TERMINAL

MODEL UP-3300

(For "V" version)

CONTENTS

CHAPTER 1. PROGRAM RESET and SRV mode	1
CHAPTER 2. MASTER RESET (All Memory Clear)	2
CHAPTER 3. READING OF SRV MODE PROGRAM	4
CHAPTER 4. SRV MODE PROGRAMMING ("2 SETTING")	9
CHAPTER 5. SRV MODE PROGRAMMING ("3 IRC SETTING")	48

* For setting in USER PROGRAMMING mode, refer to the Reference Manual which is Provided with each UP-3300.

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)