


SHARP SERVICE MANUAL

CODE: 00ZUP3300VSME

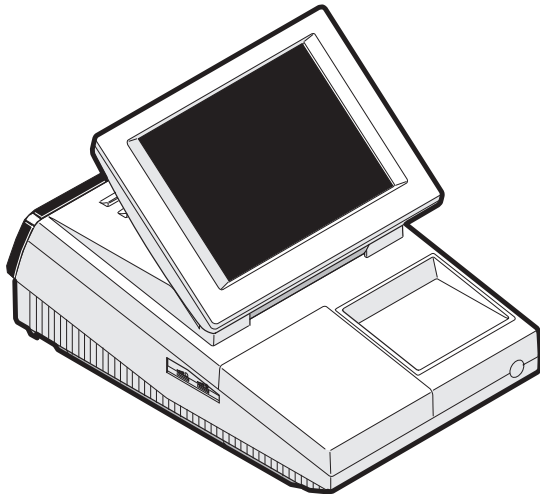

POS TERMINAL

MODEL UP-3300 (For "V" version)

CONTENTS

CHAPTER 1. SPECIFICATIONS	1-1
CHAPTER 2. OPTIONS	2-1
CHAPTER 3. SERVICE PRECAUTION	3-1
CHAPTER 4. PROGRAM RESET and SRV mode	4-1
CHAPTER 5. MASTER RESET (All Memory Clear)	5-1
CHAPTER 6. DIAGNOSTICS SPECIFICATIONS	6-1
CHAPTER 7. CIRCUIT DESCRIPTION	7-1
CHAPTER 8. CIRCUIT DIAGRAM	8-1
CHAPTER 9. PWB LAYOUT	9-1
PARTS GUIDE	

Parts marked with "⚠" is important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)