


SHARP INSTALLATION MANUAL

CODE : 00ZUP3301VIME

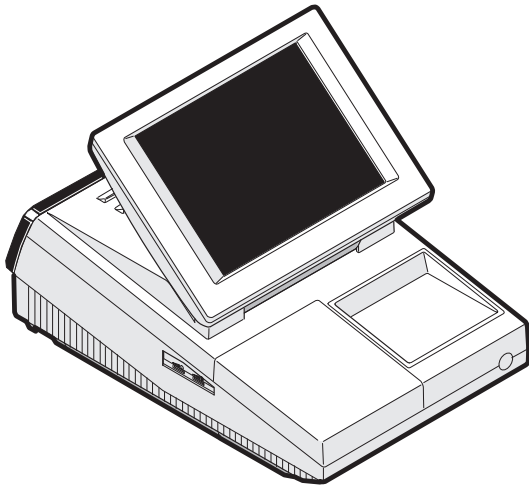

POS TERMINAL

MODEL UP-3301

(For "V" version)

CONTENTS

1. Removing the Rear display filter	2
2. Replacing the Rear display filter	2
3. Removing the Rear display	2
4. Replacing the Rear display	2
5. Removing the Top cabinet	3
6. Replacing the Top cabinet	3
7. Removing the Power transformer, NF PWB and AC cord	3
8. Replacing the Power transformer, NF PWB and AC cord	3
9. Removing the LCD unit	4
10. Replacing the LCD unit	5
11. Expansion RAM Board : UP-S02MB2M.	5
12. RS232 I/F: ER-A7RS2	5
13. EFT I/F: ER-02EF2	6
14. MCR UNIT: UP-E12MR2	6
15. DRAWER BOX UNIT: ER-03DW/04DW/05DW.	6
16. REMOTE DISPLAY : UP-P16DP	6
17. HOW TO EXTEND DISPLAY POLE	7
18. Built-in Printer: UP-T80BP	8
19. LAN	12
20. RS232 I/F: STANDARD	12

Parts marked with "△" are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/sharp/UP-3301 installation manual.html](https://the-checkout-tech.com/manuals/sharp/UP-3301%20installation%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://the-checkout-tech.com)