


# SHARP PROGRAMMING MANUAL

CODE : 00ZUP600VPME/

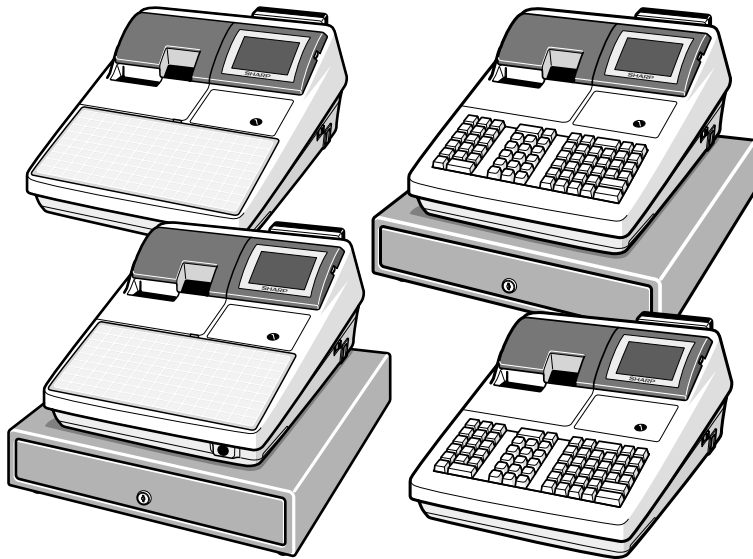

UP-700

UP-600

## POS TERMINAL

# UP-600 MODEL UP-700

(For "V" version)

### CONTENTS

CHAPTER 1. SRV. RESET AND MASTER RESET .....	2
CHAPTER 2. READING OF SRV MODE PROGRAM .....	3
CHAPTER 3. SRV MODE PROGRAMMING ("2 SETTING") .....	10
CHAPTER 4. SRV MODE PROGRAMMING (" 3 IRC SET UP") .....	45
CHAPTER 5. SRV MODE PROGRAMMING ("4 DOWN LOAD") .....	48
CHAPTER 6. SRV MODE PROGRAMMING ("5 DIAGNOSTICS") .....	49

\* For setting in PGM1 or PGM2 mode, refer to the Operation Manual.

Parts marked with "△" are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/sharp/UP-600 UP-700 programming manual.htm](https://the-checkout-tech.com/manuals/sharp/UP-600%20UP-700%20programming%20manual.htm)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)