


SHARP INSTALLATION MANUAL

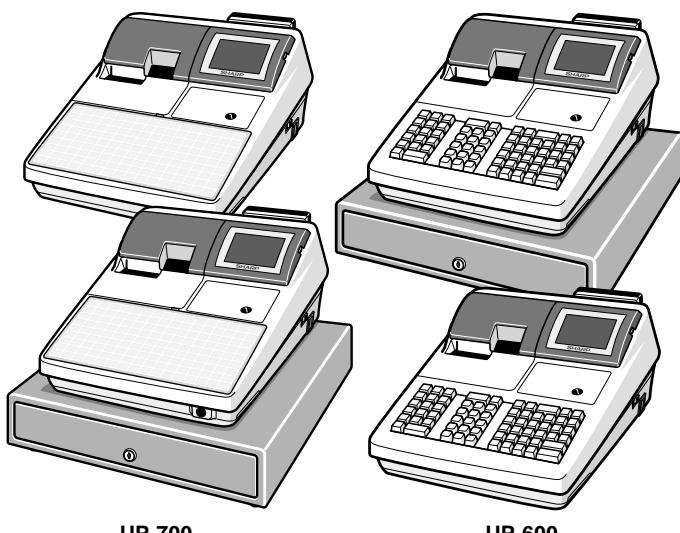

UP-700

UP-600

**UP-600
MODEL UP-700**

CONTENTS

CHAPTER 1. REMOVING THE REAR COVER	1
CHAPTER 2. REMOVING THE TOP CABINET	1
CHAPTER 3. REMOVING THE LCD UNIT	2
CHAPTER 4. REMOVING THE PRINTER UNIT	3
CHAPTER 5. REMOVING THE STANDARD DRAWER unit (For KA, KB version)	4
CHAPTER 6. EXPANSION RAM BOARD : UP-S02MB/04MB	4
CHAPTER 7. IN-LINE I/F : UP-E10IN	5
CHAPTER 8. MCR UNIT : UP-E13MR	5
CHAPTER 9. POLE DISPLAY UNIT : UP-P16DP	6
CHAPTER 10. RE-232 I/F : ER-A5RS, EFT & RS-232 I/F : ER-01EF	6
CHAPTER 11. HAND SCANNER : ER-A6HS1	7
CHAPTER 12. REMOTE DRAWER : ER-04DW/05DW	8
CHAPTER 13. RS232DEVICES	8
CHAPTER 14. ONE HOLE CLERK KIT : DKIT-8669BHZZ (For UP-600)	8
CHAPTER 15. DRAWER SEPARATION KIT : DKIT-3409BHZZ (For KA/KB version)	9

Parts marked with "▲" are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/sharp/UP-600 UP-700 installation manual.html>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)